

Usage Precautions for the PA-6508, 6513, or 6520 Power Unit

Copyright © 1999 by Seiko Epson Corporation
Printed in Japan

This section presents important information intended to ensure safe and effective use of this product. Please read this section carefully and store it in an accessible location.

⚠ WARNING:

Shut down your equipment immediately if it produces smoke, a strange odor, or unusual noise. Continued use may lead to fire or electric shock. Immediately unplug the equipment and contact your dealer or a SEIKO EPSON service center for advice.

Never attempt to repair this product yourself. Improper repair work can be dangerous.

Never disassemble or modify this product. Tampering with this product may result in injury, fire, or electric shock.

Never insert or disconnect the power plug with wet hands. Doing so may result in severe shock.

Do not allow foreign matter to fall into the equipment. Penetration of foreign objects may lead to fire or shock.

If water or other liquid spills into this equipment, unplug the power cord immediately, and then contact your dealer or a SEIKO EPSON service center for advice. Continued usage may lead to fire or shock.

Do not place multiple loads on the power outlet (wall outlet). Overloading the outlet may lead to fire.

Do not use the product with any rating not specified on the label. Doing so may lead to damage or fire.

Handle the power cord with care. Improper handling may lead to fire or shock.

Do not modify or attempt to repair the cord.

Do not place any object on top of the cord.

Avoid excessive bending, twisting, and pulling of the cord.

Do not place cord near heating equipment.

Check that the plug is clean before plugging it in.

Be sure to push the prongs all the way in.

If the cord becomes damaged, obtain a replacement from your dealer or a SEIKO EPSON service center.

Regularly remove the power plug from the outlet and clean the base of the prongs and between the prongs. If you leave the power

plug in the outlet for a long time, dust may collect on the base of the prongs, causing a short and fire.

⚠ CAUTION:

Be sure to use this product only with the products listed in "Supported Products" below. Do not connect it to equipment from other manufacturers. Use this product only for its intended application. Improper usage may lead to equipment damage, fire, or shock.

Be sure to set this unit on a firm, stable, horizontal surface. The product may break or cause injury if it falls.

Do not use in locations subject to high humidity or dust levels. Excessive humidity and dust may cause equipment damage, fire, or shock.

Do not place heavy objects on top of this product. Never stand or lean on this product. Equipment may fall or collapse, causing breakage and possible injury.

To ensure safety, please unplug this product prior to leaving it unused for an extended period.

Be sure the product is not covered with any fabric, such as a blanket or tablecloth, during use. This may cause overheating inside the product and lead to fire.

Supported Products

The PA-6508/6513/6520 power unit is intended for use only with EPSON products listed below. Never use the PA-6508/6513/6520 with unlisted products. Doing so may lead to fire, smoke emission, or other hazards.

TM-U200 Series

TM-U300 Series

TM-U325 Series

Unpacking and Preparation

Confirm that the package includes the power unit. If the power unit is damaged or incomplete, contact your dealer for assistance. After unpacking, save the packaging materials so that you can reuse them for future transport of the unit.

Usage and Storage Locations

The power unit should always be kept in a safe and stable environment, both when in use and when in storage. In particular, keep the unit away from the following, which may cause damage, fire or other accidents:

Direct sunlight, high temperature and humidity, extreme changes in temperature, heating and cooling equipment, volatile materials, high levels of dust, locations that might become wet, fire, vibration, and impact.

Important Safety Rules

Set the power unit so that its label side is facing up.

Do not connect to electrical outlets close to devices that generate voltage fluctuations or electrical noise. In particular, stay clear of devices that use large electric motors.

Always connect the DC cable before plugging the power cord into the wall outlet.

When disconnecting power, always unplug the power cord from the wall outlet before disconnecting the DC cable.

When disconnecting the DC cable, hold it firmly at the connector area. Do not tug on the cord itself.

To clean the unit, wipe with a dry or slightly moistened (and firmly wrung out) cloth.

Never clean the unit while it is plugged into the wall outlet.

Note that this unit is not equipped with an ON/OFF switch. Keep in mind that you may need to pull the plug out of the socket in order to cut the power in the event of a problem with the connected device.

Never attempt to stretch the cords to enable a connection. The power cord and DC cable must have adequate slack at all times during use.

Never allow the power unit to hang from the power cord or DC cable.

Do not place metallic parts (such as fasteners) in contact with the DC cable.

Do not clean the unit with thinner, benzine, or alcohol.