

Important Initial Ink Charging Instructions

1. Peel away the 3 pieces of tape and remove the spacer from the slip paper path.
2. Make sure the printer is on.
3. Open the roll paper cover and insert the roll paper; then close the cover.
4. Open the ink cartridge cover.
5. Take the new cartridge out of its packing and remove the yellow tape.
6. Note: You must not remove any tape on which the EPSON logo is printed.
7. Insert the cartridge firmly but gently as far as it will go until it clicks into place. For the two-color model, you need to insert two separate ink cartridges.
8. Close the cover.

Note:

The printer takes about 1 minute to charge the ink. The **POWER LED** flashes during this operation. Be sure not to turn off the power or open the printer cover while the **POWER LED** is flashing.


When the initial ink charging is finished, the **POWER LED** stays on.
For full instructions, see the User's Manual.

Attaching the Feeder Guide

Feeding paper using the included feeder guide allows you to insert a check straight. Also, the auto sheet feeder (ASF) model printers can feed up to 25 checks without manual feeding. Follow these steps to attach the feeder guide.

1. Hold the edge of the feeder guide carefully.
2. Insert the dowels of the feeder guide into the holes on the feeder guide; then move it down until it stops in place.

Dowel of the feeder guide

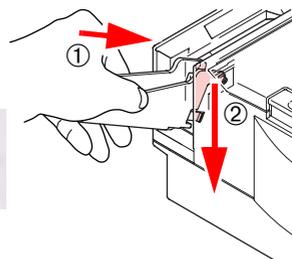

Attaching the Pocket (only for the ASF model)

A pocket is provided with each auto sheet feeder (ASF) model printer. Follow the steps shown below to attach the pocket.


1. Push down the pocket cover on the left of the printer, and remove it.

Note:


To attach the cover again, insert the cover while pushing it up.



2. Make sure that the ejection lever is open. If it is closed, open it.

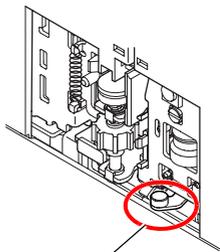

The ejection lever is open.


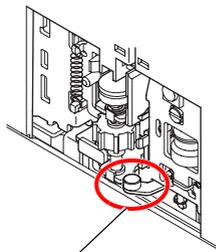


The ejection lever is closed.

Note:


Be careful not to hurt your fingers on the lever edge.

3. Position the pocket as shown in the picture below, and push it into the printer until it clicks in place.

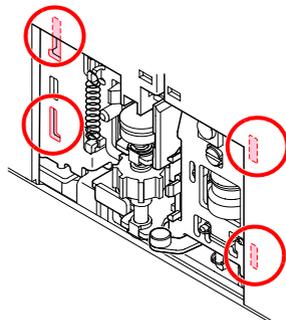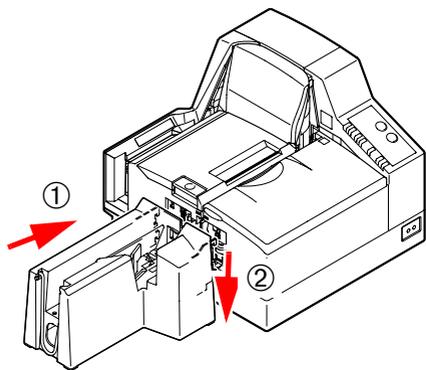

Insert the hooks on the four corners of the pocket into the holes indicated with the circles, and move the pocket into place.

4. Unfold the stopper of the pocket as shown in the following picture.

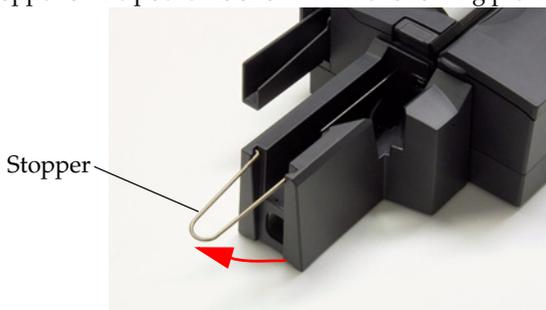

Note:

To remove the pocket, place the printer vertically as shown in the picture below; then while pushing up the lever on the bottom of the pocket, slightly push the pocket backward, and then pull it up.

