


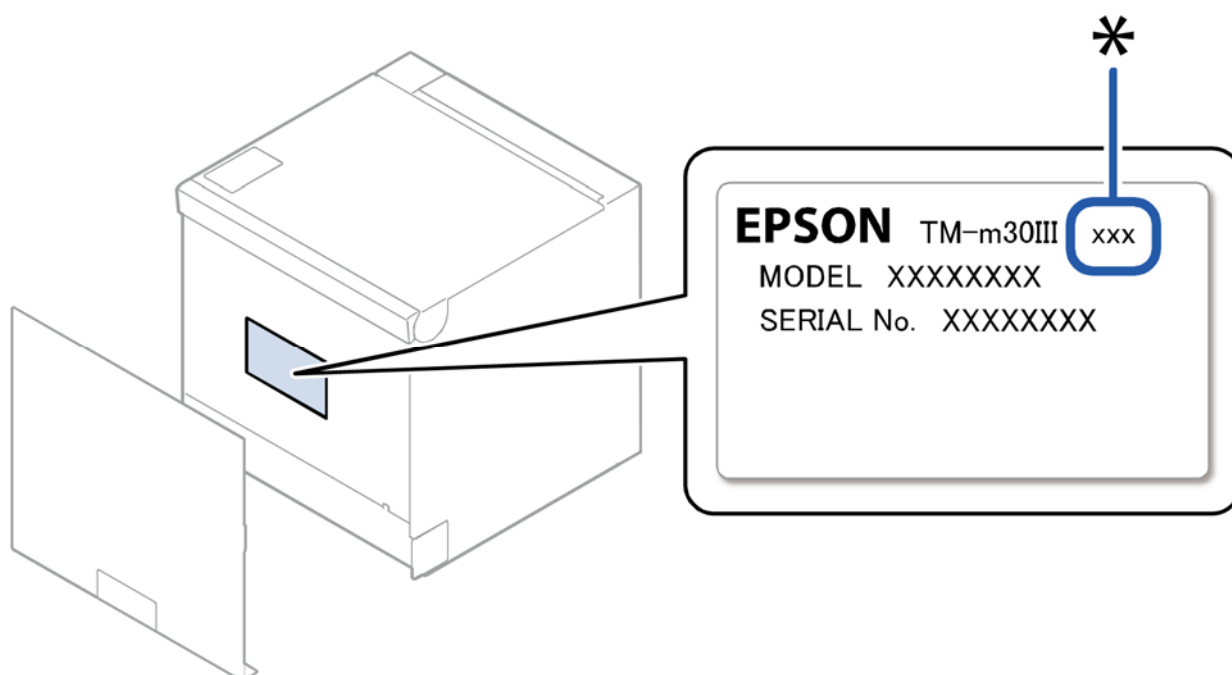

*	USB-A	USB-B	USB-PD	Ethernet	Wi-Fi	Bluetooth	microSD
201, 202, 301, 302, 401, 402, 501, 502, 701, 702, 901, 902	✓	✓	✓	✓	-	-	-
021, 022, 026, 027, 091, 231, 232, 291, 341, 342, 441, 442, 541, 542, 621, 622, 741, 742, 941, 942	✓	✓	✓	✓	✓	✓	-
011, 012, 016, 017, 111, 112	✓	✓	✓	✓	-	-	✓
051, 052, 151, 152, 156, 157, 191, 192	✓	✓	✓	✓	✓	✓	✓