

TM-C3400 / TM-C3500 / CW-C4000 / CW-D3800 Series
Série TM-C3400 / TM-C3500 / CW-C4000 / CW-D3800



ファンフォールド紙をセットする場合

When Installing Fanfold Paper

Dans le cas de papier en accordéon

Beim Einlegen von Endlospapier

Bij het plaatsen van kettingpapier

Quando si inserisce carta continua

Quando Coloque Papel Contínuo

Ao Instalar o Papel Contínuo

При установке фальцованной бумаги

安裝折疊式記錄紙時


安裝折疊式記錄紙時

①




OFF
ARRÊT

②

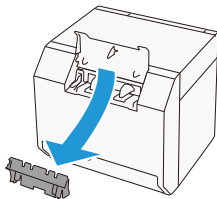

③

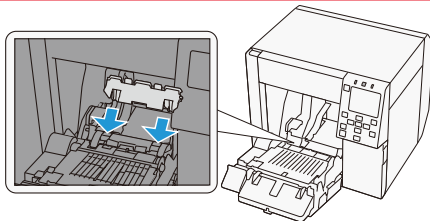

©Seiko Epson Corporation 2021–2026

Printed in XXXXXX

Pays d'impression : XXXXXX

País de impressão: XXXXXX

Impreso en XXXXXX

YYYYYYYYYYYY



412539402