

EVO TRE 16-180

Operation Guide

Safety and Accident Prevention

Name and Function of Each Part

Workflow before Beginning Work

Print Workflow

Workflow When Turning Off the Power

Troubleshooting

Specifications



Cautions

- No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation.
- No patent liability is assumed with respect to the use of the information contained herein.
- While every precaution has been taken in the preparation of this book, Seiko Epson Corporation assumes no responsibility for errors or omissions.
- Neither is any liability assumed for damages resulting from the use of the information contained herein.
- Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.
- Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Trademarks

Microsoft[®] and Windows[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

Adobe and Photoshop are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and other countries.

All other trademarks are the property of their respective owners and used for identification purpose only.

©Seiko Epson Corporation 2019–2023

Contents

■ Contents.....	3
-----------------	---

Safety and Accident Prevention..... 6

■ Important Safety Information	6
Meaning of Symbols	6
Warning Labels	8
■ Safety Information	12
General Precautions	12
Handling Precautions	14
Cautionary Information Regarding Consumables (Ink, Maintenance Liquid) and Waste Ink	15
Handling Precautions	16
■ Emergency Stop and Pause.....	17
Emergency Stop	17
Pause.....	17

Name and Function of Each Part..... 18

■ Name of Major Parts	18
■ Name of Each Part.....	20
■ Tower Lamps and Rotary Beacon.....	25
■ Ink rack.....	26
■ Control Panel	27

Workflow before Beginning Work..... 31

■ Workflow.....	31
■ Turning On the Compressed Air Equipment.....	32
■ Checking the Air Pressure	32
■ Removing the Stopper Pin of the Pressure Roller.....	33
■ Supply Water to and Check the Belt Cleaning Unit	34
Opening the Water Supply Valve.....	34
Belt Checking the Belt on the Cleaning Unit.....	34
■ Check the Amount of Waste Ink Remaining in the Waste Ink Tank	35
■ Prepare the Fabric.....	36
■ Adjusting the Fabric Peeling Prevention Bar	37
■ Checking Operating Parts	41

■ Checking the Exhaust Equipment	42
■ Pushing an Emergency Stop Button for an Emergency Stop	43
■ Turning On the Power	43
■ Starting Leonardo	44
■ Releasing an Emergency Stop Button.....	45
■ Executing Set Point.....	46
■ Check the Operation of the Emergency Stop Equipment.....	47
Checking the Emergency Stop Buttons on the Machine.....	47
Checking the Emergency Stop Functions in the System.....	47
Checking the Emergency Stop Function of the Cleaning Tank.....	48
■ Inspect for Leaks in the Ink Path	49
■ Inspect the Open Cover Detection	50
■ Nozzle Check.....	51
Setting the Acrylic Board.....	51
Printing the Nozzle Check Pattern	52
Confirmation Method.....	53
■ Head Cleaning	54
Cleaning with Leonardo	54
<hr/>	
<i>Print Workflow</i>	56
■ Workflow.....	56
■ Set the Fabric	57
Installing the Fabric.....	57
Slack Mode	64
Fabric Meandering Correction	70
■ Set the Foreign Material Detection Sensor	76
■ Set the Printer	78
Set the Fabric Thickness and Head Height.....	78
Set the Printer Equipment and Sensors	79
■ Load the Print Data	80
■ Set the Print Data	82
■ Printing	84
Checking the Status of the Fabric	84
Checking the Print Path	84
Checking the Ink.....	84
Configuring the Print Settings.....	84
Print.....	85
Checking the Cleaning Unit	85
Printing Ends.....	85
■ Stopping Printing.....	86

■ Replace the Ink	87
Checking the Amount of Ink.....	87
Replace the Ink.....	88
■ Changing User Permissions	93
■ Check the Belt Cleaning Unit Operation.....	94

Workflow When Turning Off the Power..... 95

■ Inserting the Stopper Pin of the Pressure Roller.....	96
■ Cleaning.....	97
Wipers and Caps.....	97
Flushing Plate	97
Belt (When Using Pigment Ink).....	97
■ Exiting Leonardo	97
■ Turning Off the Control PC.....	97
■ Emergency Stop by Use of an Emergency Stop Button.....	98
■ Turn off the Main Power	98
■ Closing the Water Supply Valve on the Belt Cleaning Unit	99
■ Turning Off the Compressed Air Equipment	99

Troubleshooting..... 100

Error Messages.....	100
Error Lamp of the Dry Air System	104
Print Quality	104
Manual flushing.....	104
Print Head Failure.....	106

Specifications..... 107

■ Basic Specifications	107
■ Resolution/Number of Passes and Print Speed.....	108
■ Printing Width.....	109
■ Elevation	109
■ Power.....	110
■ Supported Ink.....	112
■ Ink Cartridges	115
■ Consumables	116

Safety and Accident Prevention

This section provides information regarding safety and accident prevention.

Important Safety Information

This manual provides important safety information, describes the symbols that are used both in this manual and on this machine, and explains the basic procedures for operating this machine.

Be sure to read this manual carefully before using this machine. Store this manual in a safe location where it can be easily referred to whenever you have a question.

For more information about maintenance procedures and how to troubleshoot common problems, refer to the “Maintenance Guide”.






Online manuals are available from qualified service personnel.

Meaning of Symbols

The following warning symbols are used in this manual and on this machine to indicate hazardous operations, to ensure that this machine is used safely and correctly in order to prevent injury to the user and other persons and damage to property.

Please carefully read and understand these warnings before using this machine.

Symbols in This Manual

 WARNING	This symbol indicates that incorrect operation could result in death or serious injury.
 CAUTION	This symbol indicates that incorrect operation could result in injury and/or damage to property.
	This symbol indicates a supplementary explanation or additional information that the user should know.
	This symbol indicates user permissions for general users who have been trained in the operation of the machine, to perform cleaning and simple maintenance procedures while protective devices are engaged and the machine is set to normal operation on the button panel.
	This symbol indicates user permissions for general users who have been officially trained in the operation of this machine, to perform some functions and maintenance procedures that are allowed in addition to all of the functions for L.

Indicates actions that must not be taken (prohibited actions).	Indicates actions that must be taken and/or instructions that must be followed.	Do not disassemble	Do not touch	No flames

Eye protection must be worn	Protective gloves must be worn	Protective clothing must be worn	Respiratory protection must be worn	Hair net required

Symbols on This Machine

Do not remove the warning labels that are attached to this machine. If a warning label becomes illegible or is removed, contact qualified service personnel for a replacement label.

CAUTION: Risk of electric shock	CAUTION: High temperature	CAUTION: Risk of pinching or crushing fingers	CAUTION: Risk of hand injury	

CAUTION: Risk of becoming pulled into machine	CAUTION: Risk of becoming pulled into machine	CAUTION: Risk of becoming caught between parts	Do not operate without guard	CAUTION: Risk of damage, falling, or injury due to breakage

No pacemakers	CAUTION: Strong magnetic field	CAUTION: Watch your head	No flames	Do not wears scarfs/ neckties

Do not clean, maintain, or repair	CAUTION: Risk of electric shock Turn off the power before opening the door	Connect an earth terminal to the ground	USB

When opening the front protective covers



Print head









Main electric box













Safety Information










This section provides information that must be observed in order to use this machine safely and prevent injury and/or property damage.




General Precautions

 WARNING	
	Use a power cord that meets the safety standards for the region in which this machine is used.
	Contact qualified service personnel before connecting a new earth terminal.
	Install this machine on a flat, stable surface that is wider than the machine and that can safely support its weight. Contact qualified service personnel for assistance before moving this machine. There is a risk of injury if this machine tips over. There is a risk of electric shock or fire if cables become damaged. Expected performance levels might no longer be guaranteed if changes are made to the condition of this machine.
	Do not use this machine near flames or volatile substances such as alcohol and thinner. Otherwise, there is a risk of electric shock or fire.
	Do not use this machine in environments where flammable gas or explosive gas might be present. In addition, do not use flammable gas sprays in or near this machine. Otherwise, there is a risk of fire.

 CAUTION	
   	<p>Be sure to wear personal protective equipment (gloves, work clothes) when operating this machine. Long hair should be tied back and worn under a hair net. Otherwise, your hands and clothing could become stained with ink, and your fingers and hair could become caught in the machine.</p>
    	<p>Wear eye protection, protective gloves, protective clothing, and respiratory protection when applying or removing glue or removing ink film. Check the Safety Data Sheet (SDS) for the glue, remover, or ink film remover you will actually use for details, and wear the necessary protective gear.</p>

Handling Precautions

 WARNING	
	<p>Immediately stop using this machine if there is smoke, unusual odors or sounds, or any other abnormal conditions. Otherwise, there is a risk of electric shock or fire. If an abnormal condition occurs, immediately turn off the main power, cut off all power supplied to the machine, and contact qualified service personnel for assistance.</p>
	<p>Do not attempt any repairs yourself. Doing so is extremely dangerous.</p>
	<p>Do not insert or drop metallic or flammable items into any openings on the machine. Otherwise, there is a risk of electric shock or fire.</p>
	<p>Do not touch any areas inside this machine other than those that are indicated in this manual. Otherwise, there is a risk of electric shock or burns.</p>
	<p>Do not remove any parts other than those that are indicated in this manual, and do not install, disassemble, or modify any parts other than those specified. Otherwise, you could be injured or an accident could occur due to abnormal heat or electric shock.</p>
	<p>Do not deliberately remove or disable safety devices. Doing so leads to the risk of injury, malfunction, and/or damage to the machine.</p>
	<p>Do not operate this machine or the computer while maintenance is being performed. Doing so leads to the risk of your hand or other parts of your body becoming caught in the machine.</p>
	<p>Keep your hands away from moving parts, such as the fabric feeding belt, pressure roller, cleaning tank chain, and vertically moving parts of the cleaning tank, while the machine is operating. Otherwise, there is a risk of your hands, hair, or clothing becoming caught in the machine.</p>
	<p>Do not operate this machine if you have a pacemaker. The electromagnetic waves that are generated by this machine can affect the operation of pacemakers.</p>
	<p>This machine generates a strong magnetic field. Do not use precision equipment such as watches and mobile telephones nearby. Precision equipment could malfunction or become damaged by the strong magnetic field.</p>





 CAUTION	
	<p>Be careful to avoid pinching your hands and fingers or hitting your head on the corner of the protective covers when opening and closing the protective covers on this machine. Failure to do so could lead to injury.</p>
	<p>The setting and removal of fabric rolls should be performed by two people. When lifting a fabric roll, lift with your legs and not your back. Fabric rolls weigh 30 kg or more. Dropping a fabric roll can lead to injury. Lifting with incorrect posture can lead to injury and/or back pain.</p>







Cautionary Information Regarding Consumables (Ink, Maintenance Liquid) and Waste Ink

Read the Safety Data Sheet (SDS) before handling ink cartridges*, maintenance liquid*, scan spindle grease, and waste ink. The Safety Data Sheet is available from the following department.






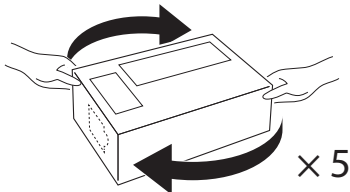
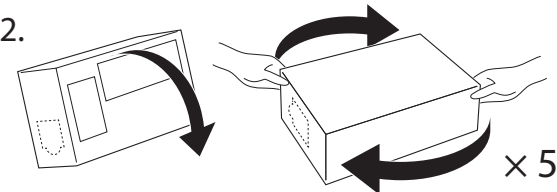



* These are consumable items (sold separately).

Seiko Epson Corporation
 Printer Sales & Marketing Department, Hirooka Office
 Address: 80 Harashinden, Hirooka, Shiojiri, Nagano 399-0785
 Telephone: +81-263-52-2552

 WARNING	
	<p>If fluid gets on your skin or enters your eyes or mouth, take the measures below.</p> <ul style="list-style-type: none"> • If fluid gets on your skin, rinse immediately with soap and water. • If fluid enters your eyes, rinse immediately with water. Failure to observe this precaution could result in bloodshot eyes or mild inflammation. If problems persist, consult with a physician. • If fluid enters your mouth, consult a physician immediately.
	<p>Do not disassemble or remodel the cartridge. Otherwise, fluid could get in your eyes or come in contact with your skin.</p>
	<p>Keep ink cartridges, maintenance liquid, cleaning liquid, scan spindle grease, waste ink, glue, remover, and ink film remover out of the reach of children.</p>

 CAUTION	
    	<p>During maintenance, wear eye protection, protective gloves, protective clothing, and respiratory protection as required.</p>

 Handling Precautions

 CAUTION	
	<p>Do not touch the IC chip on the cartridge.</p>
	<p>Store ink cartridges within the indicated temperature range. Do not store them in high or freezing temperatures.</p>
	<p>Do not use reactive ink, acid ink, dispersion ink, and pigment ink at the same time (including ink penetration liquid).</p>
	<p>Before installing, stir ink with the following procedures. However, stirring is not needed for ink penetration liquid and cleaning liquid.</p> <ol style="list-style-type: none"> 1. Put cartridge on flat surface and rotate 5 times. 2. Turn over cartridge and rotate 5 times. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>1.</p>  </div> <div style="text-align: center;"> <p>2.</p>  </div> </div>
	<p>Dispose of used cartridge according to local laws and regulations.</p>
	<p>Epson recommends the use of genuine Epson ink cartridge. Epson cannot guarantee the quality or reliability of nongenuine ink.</p> <p>The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior.</p> <p>For more information about the warranty for this machine, please refer to the Delivery Specifications.</p>
	<p>This machine is designed to stop operating before the ink completely runs out, in order to maintain the quality of the print head. Therefore, a small amount of ink will remain in used ink cartridges.</p> <p>The running cost will vary by usage environment and usage conditions.</p>

Emergency Stop and Pause

Emergency Stop

In the event of an emergency, press an emergency stop button on the machine. There is a total of five emergency stop buttons on the machine, on the left and right sides of the front and rear sides and one in the main electric panel. The machine comes to an immediate stop when an emergency stop button is pressed. If printing is in progress when the emergency stop button is pressed, printing will not resume from the point where it ended. Execute Set point and then set the job again and resume printing.

Pause

Press the [STOP/PAUSE] button on the machine. There is a total of four [STOP/PAUSE] buttons on the machine, on the left and right sides of the front and rear sides. If a [STOP/PAUSE] button is pressed, printing is paused and the head comes to a stop at either the flushing area or the cleaning station. Press the [Start] button for Leonardo to resume printing.


Name and Function of Each Part

This section describes the name and function of each part.

Name of Major Parts


This section describes the name and function of major parts.

Front

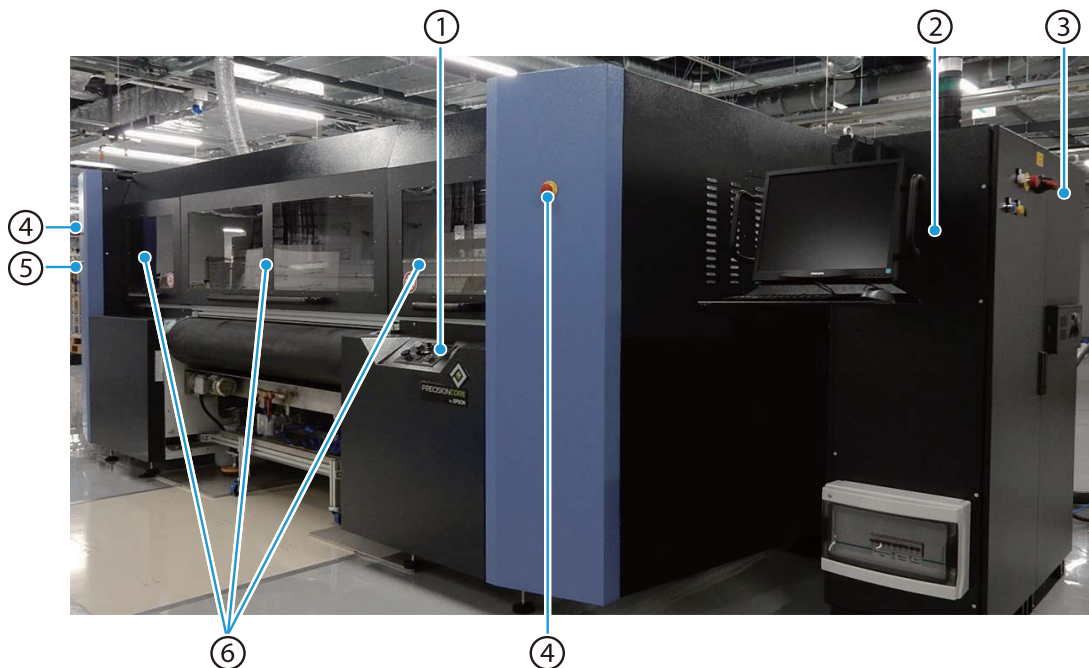

No.	Name	Description
1	Front panel	Location of the operating panel for performing operations on the front of the machine.
2	Control PC	Used to control Leonardo (Application for printer control) from the main unit.
3	Main electric box	Houses the power supply unit and the control PC.
4	Emergency stop button	Stops operation of this machine immediately. Installed at four positions around the printer and one on the main electric box.
5	Pause button	Printing is paused and the print head stops in the flushing area or the cleaning station area. Installed at a total of four positions on the front panel and rear panel.
6	Front Protection Covers	These are movable covers. Open these covers to clean and perform maintenance on the belt, caps & wipers, scan spindle, and flushing plate.

Rear

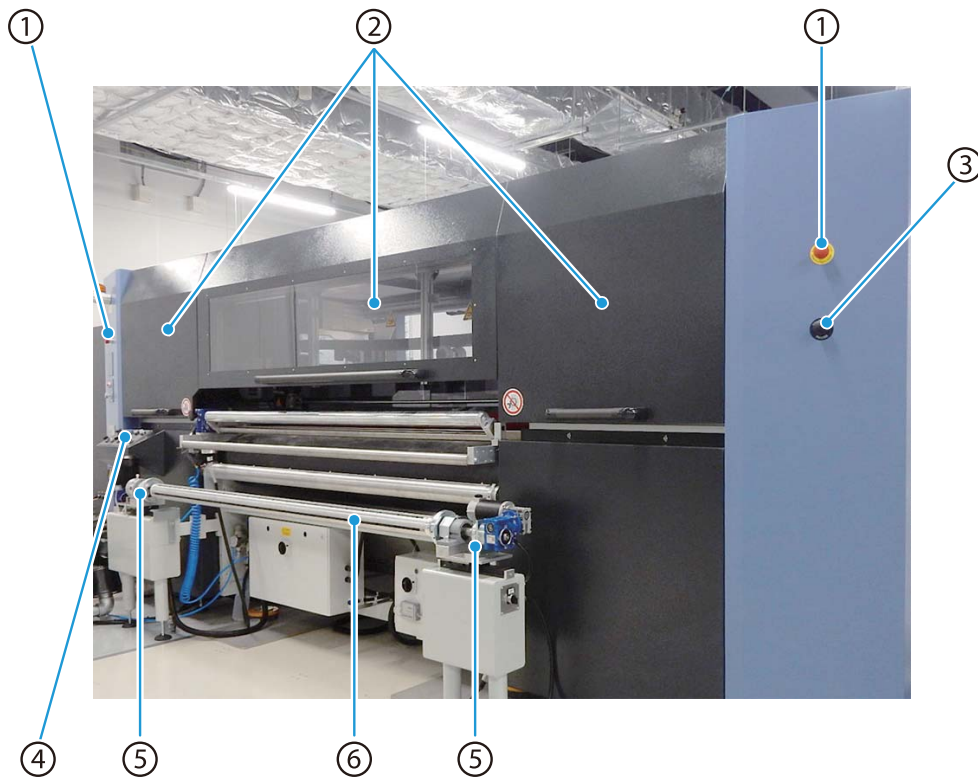


No.	Name	Description
1	Emergency stop button	Stops operation of this machine immediately. Installed at four positions around the printer and one on the main electric box.
2	Rear Protection Covers	These are movable covers. Open these covers to perform maintenance.
3	Pause button	Printing is paused and the print head stops in the flushing area or the cleaning station area. Installed at a total of four positions on the front panel and rear panel.
4	Rear panel	Location of the operating panel for performing operations on the rear of the machine.
5	Feeding unit	The fabric roll is installed here, and the unit feeds the fabric into the machine. Installed on the right and left sides.
6	Fabric spindle	The spindle to attach the fabric. The fabric is attached to this spindle and set to the feeding unit.

Name of Each Part

This section describes the name and function of each part including major parts.


Front

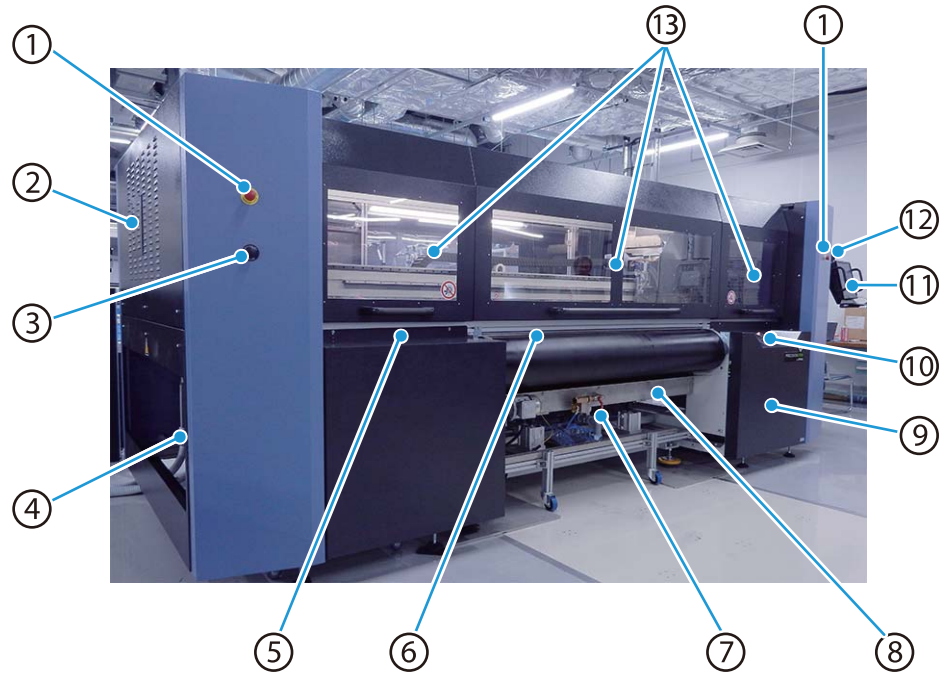

No.	Name	Description
1	Emergency stop button	Stops operation of this machine immediately.
2	Maintenance window for mist filter	Use this maintenance window to clean/replace the mist filter.
3	Pause button	Printing is paused and the print head stops in the flushing area or the cleaning station area.
4	Ink tank housing	This housing contains the sub-tank rack.
5	Flushing area	This contains the flushing plate, and the print head performs flushing here.
6	Fabric peeling prevention bar	This bar prevents the peeled part of the fabric from floating up when winding the printed fabric in the dryer. Adjust the height of the bar whenever changing the fabric type or thickness. For more information, refer to "Adjusting the Fabric Peeling Prevention Bar" on page 37. If you would like to install a fabric peeling prevention bar, contact qualified service personnel.
7	Water supply valve on the belt cleaning unit	This is the valve on the belt cleaning unit that supplies water to the unit.
8	Belt cleaning unit	This unit contains the belt cleaning tank for cleaning ink and other foreign material adhering to the belt.


No.	Name	Description
9	Cleaning station area	Caps and wipers are located at the top, for performing cleaning and replacement. For models with waste ink tanks, a waste ink tank is installed at the bottom of the cleaning station.
10	Front panel	Location of the operating panel for performing operations on the front of the machine.
11	Control PC	Used to control Leonardo from the main unit.
12	Main electric box	Supplies power and houses the control PC.
13	Front Protection Covers	These are movable covers. Open these covers to clean and perform maintenance on the belt, caps & wipers, scan spindle, and flushing plate.

Front (When opening the front protective covers)

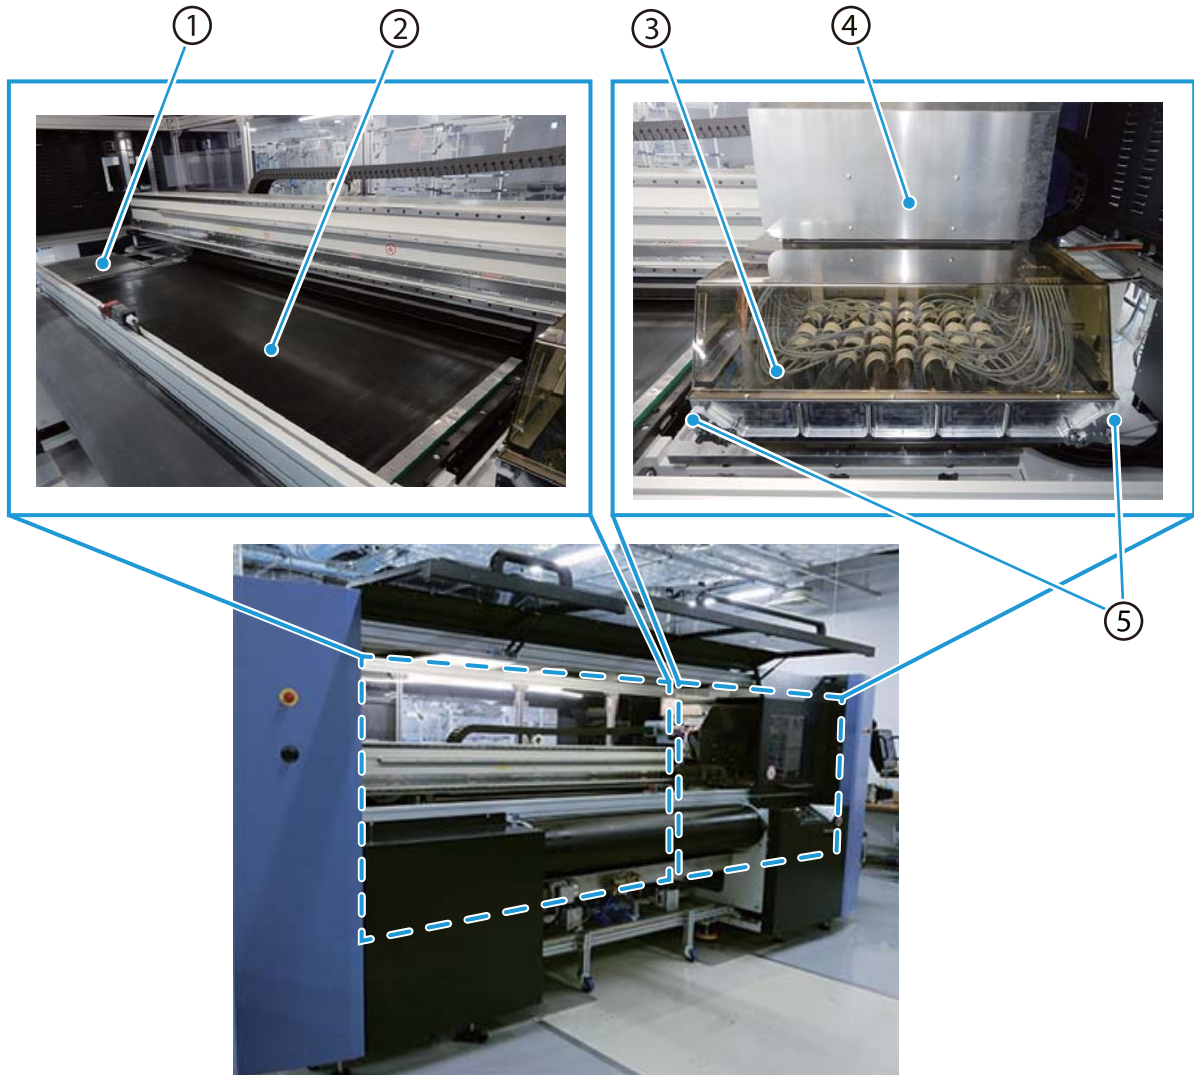

No.	Name	Description
1	Flushing area	This contains the flushing plate, and the print head performs flushing here.
2	Belt	This belt feeds fabric attached to it.
3	Print Head	Equipped with the print head used for printing on fabric.
4	Cooling fan	Lowers the temperature of the print head control substrate.
5	Head stroke sensor	Detects foreign material on the belt as well as folds and wrinkles in the fabric.

Rear

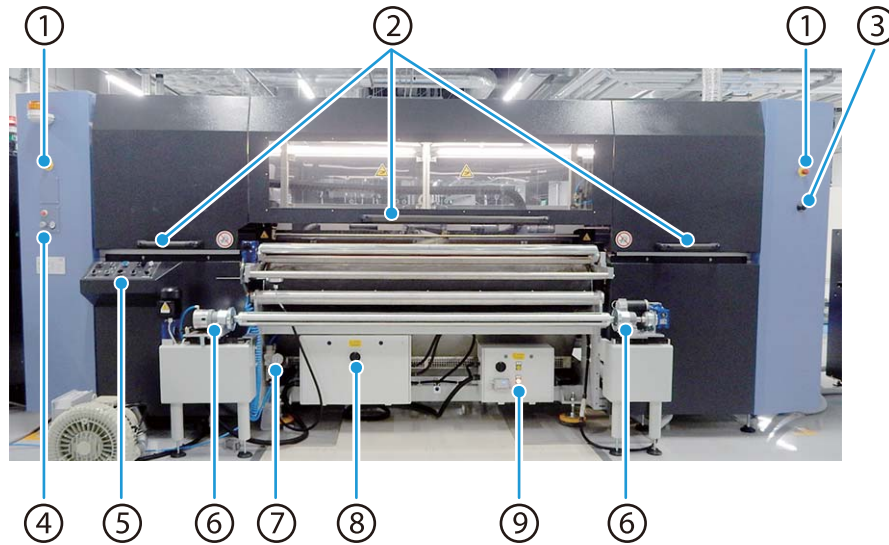


No.	Name	Description
1	Emergency stop button	Stops operation of this machine immediately.
2	Rear Protection Covers	These are movable covers. Open these covers to perform maintenance.
3	Pause button	Printing is paused and the print head stops in the flushing area or the cleaning station area.
4	Fabric tension adjustment panel	Use this panel to adjust the winding tension of the fabric.
5	Rear panel	Location of the operating panel for performing operations on the rear of the machine.
6	Feeding unit	The fabric roll is installed here, and the unit feeds the fabric into the machine.
7	Air supply regulator	This regulator supplies compressed air.
8	Electric box for feeding unit	This box supplies power to the feeding unit.
9	Electric box for belt heater unit	This box supplies power to the belt heater unit.

Rear (When opening the rear protective covers)

No.	Name	Description
1	Pressure Roller	This roller swings above the fabric that is fed from the dewrinkling roller, to affix the fabric to the belt.

Tower Lamps and Rotary Beacon

Tower lamps

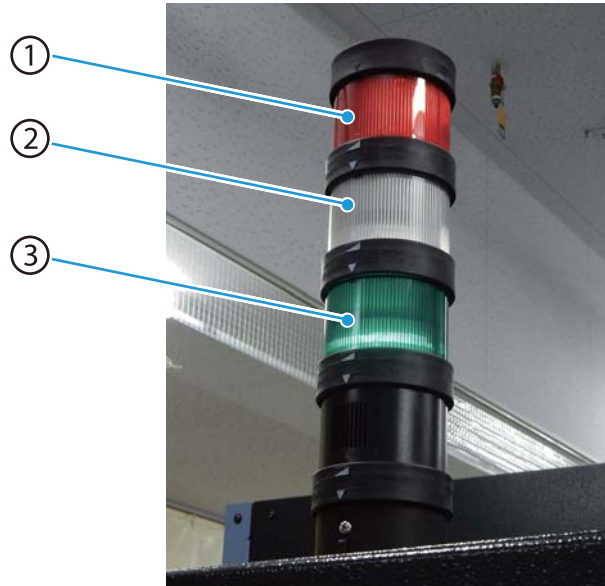

No.	Name	Description
1	Red	On: Fault status (Emergency stop or device error)
2	White	Flashing: Machine currently operating
3	Green	On: Printing standby status Flashing: Printing paused status

Rotary beacon



No.	Name	Description
1	Rotary beacon	Lights up and the buzzer sounds if the rear protection covers are opened while the machine is printing.


Ink rack



No.	Name	Description
1	Ink rack	<p>Ink is supplied from the ink cartridges to the sub-tank rack in the ink tank housing of the machine.</p> <p>The lamps on the bottom right side of each cartridge indicate when to replace that cartridge.</p> <p>Green lamp: There is ink remaining in the cartridge. Ink is being supplied to the ink rack.</p> <p>Red lamp: There is no ink remaining in the cartridge. Replace the ink cartridge.</p> <p>The amount of ink remaining is shown on Leonardo. If a cartridge needs to be replaced, a message is displayed on Leonardo.</p>
2	Ink cartridges	<p>These are 10 L ink cartridges.</p> <p>They are mounted in the ink rack.</p> <p>For information about the layout of colors, please refer to the Delivery Specifications.</p>
3	Ink rack front bar	Prevents the ink cartridges from falling out.


Control Panel

Main electric panel

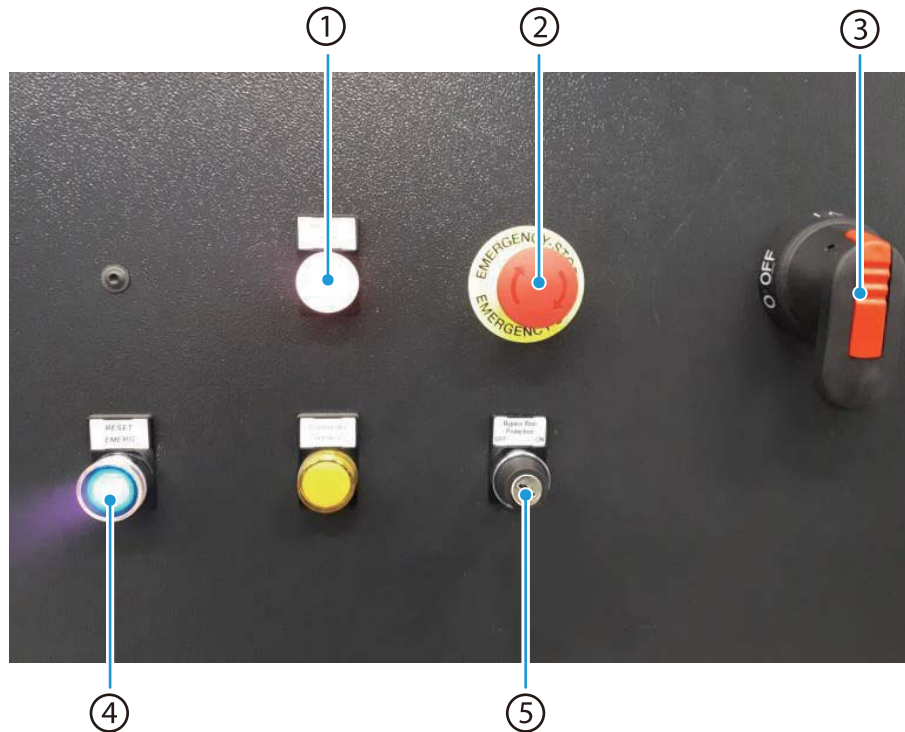


No.	Name	Description
1	Lamp (White)	When this lamp is on, power is supplied to the main circuit.
2	Emergency stop button	Stops operation of this machine immediately.
3	Main switch	Used to switch on/off the power to the main unit.
4	Reset	Press this button after selecting Set Point to start the Set Point operation.
5	Maintenance	Used when performing glue application work.

Front panel

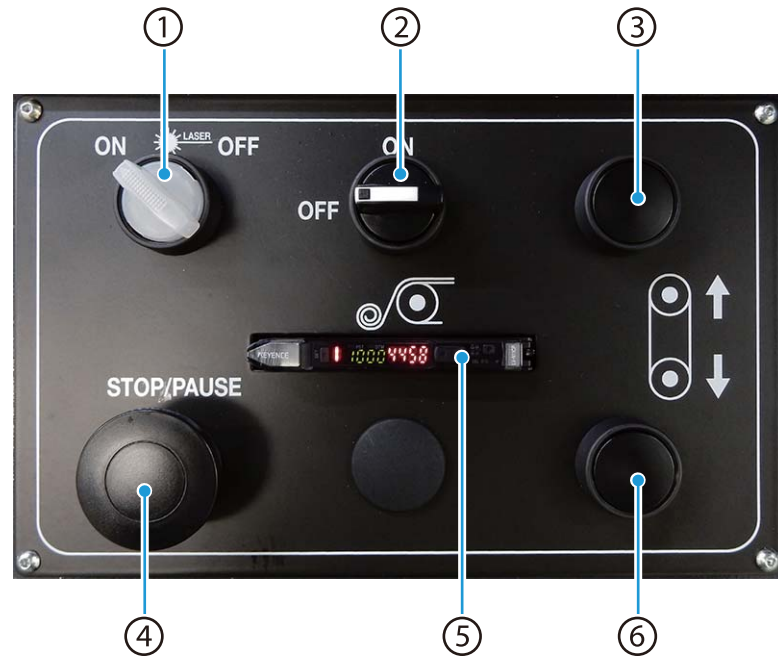


No.	Name	Description
1	Selection switch (White lamp)	Use this switch to turn ON/OFF the foreign material detection sensor.
2	Selection switch (Black)	Use this switch to enable/disable the signal from an external winder.
3	Belt feed button (Reverse)	Press and hold this button to feed the belt in the reverse direction.
4	STOP/PAUSE	Press this button to pause printing. The head comes to a stop at either the flushing area or the cleaning station. Press the [Start] button on Leonardo to resume printing.
5	Foreign material detection sensor display	Use this display to set the detection threshold value of the foreign material detection sensor and display the threshold value. For threshold values, refer to "Set the Foreign Material Detection Sensor" on page 76.
6	Belt feed button (Forward)	Press and hold this button to feed the belt in the forward direction.

Rear panel

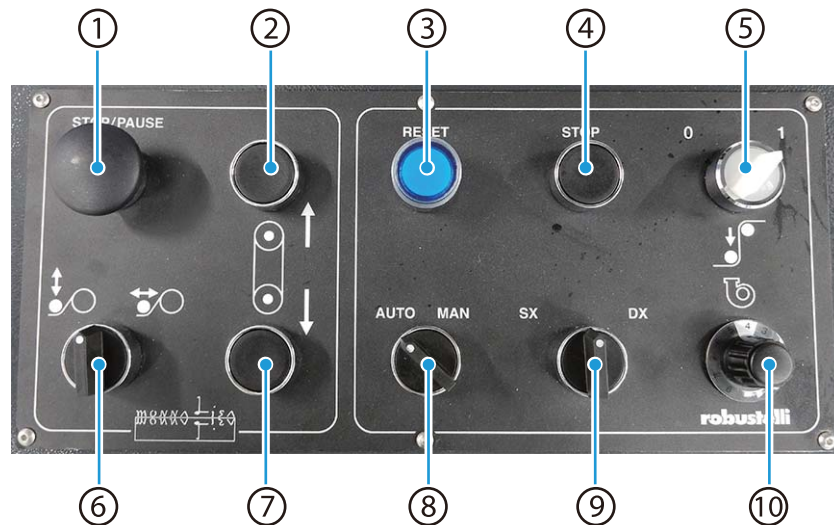

No.	Name	Description
1	STOP/PAUSE	Press this button to pause printing. The head comes to a stop at either the flushing area or the cleaning station. Press the [Start] button on Leonardo to resume printing.
2	Belt feed button (Forward)	Press and hold this button to feed the belt in the forward direction.
3	Button (Blue lamp)	Press this button to turn ON the feeding unit. (Turn on when enabling slack mode or fabric meandering correction.)
4	Button	Press this button to turn OFF the feeding unit.
5	Selection switch (White lamp)	Use this switch to turn ON (1) / OFF (0) the functions for detecting slack in fabric that is fed and for communicating with the feeding unit.
6	Selection switch (Black)	Use this switch to change the operating direction of the pressure roller. Left: Moves vertically. Right: Moves horizontally.
7	Belt feed button (Reverse)	Press and hold this button to feed the belt in the reverse direction.
8	Selection switch	Use this switch to fabric meandering correction to AUTO/MAN (MANUAL).
9	Selection switch	Use this switch to move the position of the set fabric left and right. This switch is enabled only when the selection switch in No. 8 is set to MANUAL. SX: Moves the position to the left. DX: Moves the position to the right.
10	Volume	Use this control to adjust the conveyor belt speed while glue is applied.

Fabric tension adjustment panel

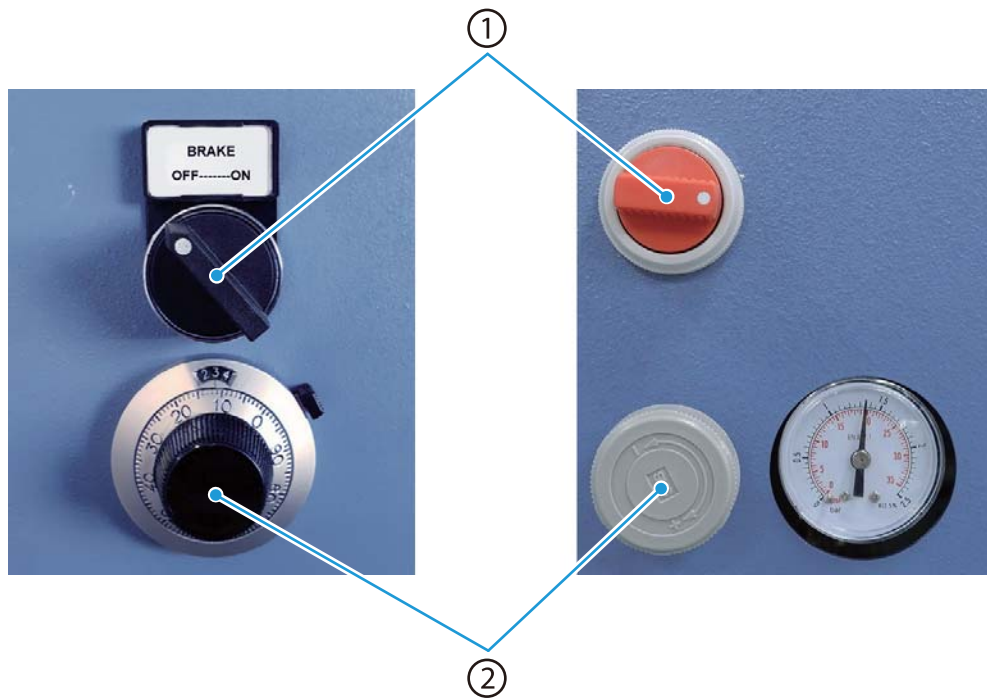

No.	Name	Description
1	Switch	Use this switch to turn OFF (Left)/ON (Right) the tension adjustment function for winding the fabric.
2	Dial	Use this dial to adjust the winding tension of the fabric.

Workflow before Beginning Work

This section describes the items to be checked before beginning work.

Workflow

Operations and Check Items for Rear Side

1. Turning On the Compressed Air Equipment ([Page 32](#))
2. Checking the Air Pressure ([Page 32](#))
3. Removing the Stopper Pin of the Pressure Roller ([Page 33](#))

Operations and Check Items for Front Side

1. Supply Water to and Check the Belt Cleaning Unit ([Page 34](#))
2. Check the Amount of Waste Ink Remaining in the Waste Ink Tank ([Page 35](#))

Other

1. Prepare the Fabric ([Page 36](#))
2. Adjusting the Fabric Peeling Prevention Bar ([Page 37](#))
3. Checking Operating Parts ([Page 41](#))
4. Checking the Exhaust Equipment ([Page 42](#))

Procedure for Turning on the Power

1. Pushing an Emergency Stop Button for an Emergency Stop ([Page 43](#))
2. Turning On the Power ([Page 43](#))
3. Starting Leonardo ([Page 44](#))
4. Releasing an Emergency Stop Button ([Page 45](#))
5. Executing Set Point ([Page 46](#))

Operations and Check Items After Turning on the Power

1. Check the Operation of the Emergency Stop Equipment ([Page 47](#))
2. Inspect for Leaks in the Ink Path ([Page 49](#))
3. Inspect the Open Cover Detection ([Page 50](#))
4. Nozzle Check ([Page 51](#))
5. Head Cleaning ([Page 54](#))

Turning On the Compressed Air Equipment

Turn on the power for the compressed air equipment connected to this machine.

Checking the Air Pressure

Compressed air must be supplied in order for the machine to operate. The machine will not operate if the specified air pressure is not supplied. An air pressure that is higher or lower than the specified air pressure could cause the machine to malfunction.

- 1 Confirm that the [Air Supply Regulator] on the rear of the machine is at 0.5 MPa (5bar).**

If it is not at 0.5 MPa, check the status of the compressed air equipment in the factory.



Removing the Stopper Pin of the Pressure Roller

- 1 Open the rear protection cover.
- 2 Remove the stopper pin located at the lower part on the right side of the pressure roller.



- 3 Remove the stopper pin on the left side of the pressure roller.



- 4 Close the rear protective covers.


Supply Water to and Check the Belt Cleaning Unit

The belt cleaning unit washes ink from the belt and dries the belt.

Opening the Water Supply Valve

Open the water supply valve at the bottom of the front of the machine.

Adjust the open/close amount to match the use conditions.

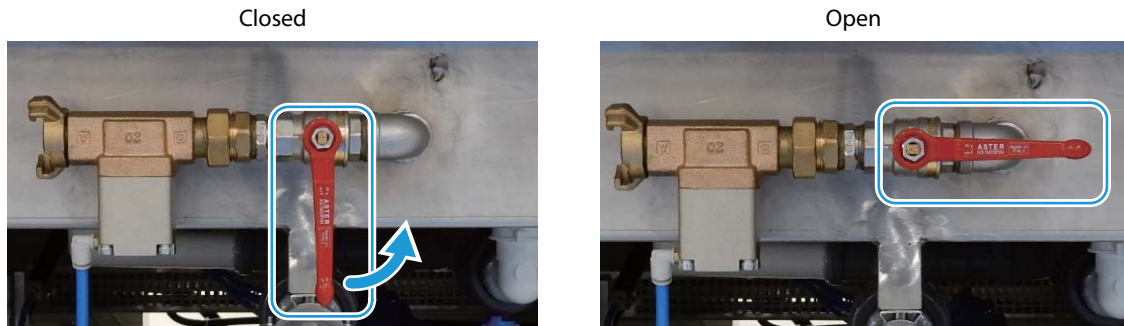

The belt cleaning unit will not operate until printing starts.
For operation check, refer to "[Check the Belt Cleaning Unit Operation](#)" on page 94.

Belt Checking the Belt on the Cleaning Unit

Check if the cleaning brushes, pads, and scrapers are dirty or worn. For more information, refer to the "Maintenance Guide".

Check the Amount of Waste Ink Remaining in the Waste Ink Tank

If there are waste ink tanks, check if there is room remaining in the waste ink tanks. If there is little room remaining in a waste ink tank, dispose of the waste ink before beginning work. For more information about how to dispose of waste ink in a waste ink tank, refer to the "Maintenance Guide".



This step is not required if there are no waste ink tanks (if the waste ink is connected directly to the drainage path).

Check the amount of waste ink in the waste ink tanks in the flushing area and cleaning station.




Waste ink tank on the flushing area side


Waste ink tank on the cleaning station side

Prepare the Fabric

Before setting the fabric, be sure to confirm the following status.

- **Fabric edge:** Confirm that there are no folds or protrusions and that the fabric is not lifted up or frayed. If the fabric is frayed, perform overcasting.
- **Seams:** Confirm that there are no protrusions and that the fabric is not frayed.

 WARNING	<p>If the fabric touches the head, the head may be damaged. The fabric must be fed and adhere to the belt without any folds, protrusions, seams, or lifting in the fabric edge whatsoever.</p>
--	--

 CAUTION	<p>If the fabric thickness and print head height are set incorrectly, the print head may collide with the fabric, resulting in a malfunction. Set the fabric thickness and the foreign material detection sensor when loading the fabric for the first time or changing the fabric type or thickness. For more information about fabric thickness, refer to "Set the Fabric Thickness and Head Height" on page 78. For more information about the foreign material detection sensor, refer to "Set the Foreign Material Detection Sensor" on page 76.</p>
--	---

If fiber containing moisture from the ink lifts up, it may come into contact with the head passing over the fabric. To avoid this, make the fabric edge firmly adhere to the belt.

Adjusting the Fabric Peeling Prevention Bar

The fabric peeling prevention bar is installed 5 mm above the belt. Depending on the thickness of the fabric, the fabric might not be able to pass below the fabric peeling prevention bar, causing a collision with print head and malfunctions. Adjust the height of the fabric peeling prevention bar whenever changing the fabric type or thickness.

- 1** Open the front protection cover.
- 2** Use a hex key (width: 4 mm) to loosen the screws on the fabric peeling prevention bar (4 screws) about half one rotation.



- 3** Lift the bar up from the belt to about 3 to 5 mm above the fabric thickness.




If using a ruler for measuring, be careful not to let the ruler get caught on the belt. Doing so could scratch or damage the belt.



- 4** Holding the bar in one hand, use a hex key (width: 4 mm) to tighten the rightmost and leftmost screws on the fabric peeling prevention bar.



- 5** Use a hex key (width: 4 mm) to tighten the remaining screws on the fabric peeling prevention bar.

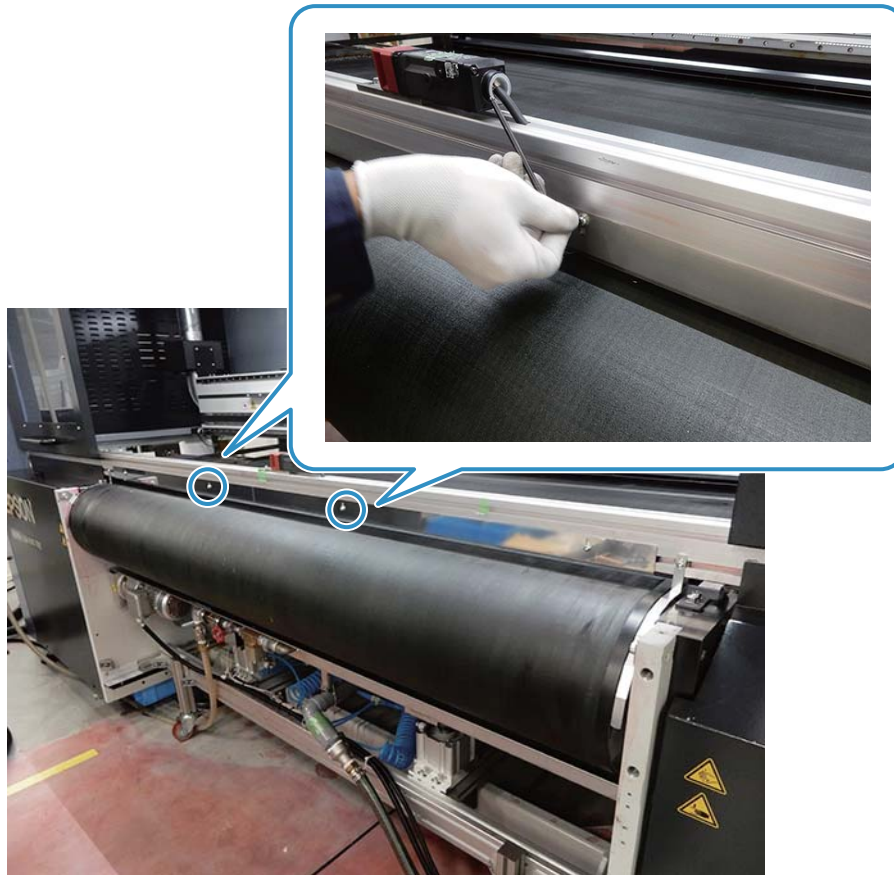

- 6** Close the front protection cover.

Checking Operating Parts

Do not place tools, fasteners, or the like on the belt or near the pressure roller or print head. Doing so could cause them to be entangled in the belt, pressure roller, or print head, damaging this machine. Before turning the power on, check that there is nothing left near the moving parts, such as on the belt or near the print head.

Front


- 1 Open the front protection cover of this machine.
- 2 Check that there are no tools, fasteners, or the like left on the belt or near the carriage or print head.



- 3 Close the front protection cover.

Rear

- 1 Open the rear protection cover of this machine.
- 2 Check that there are no tools, fasteners, or the like left near the belt or the pressure roller.

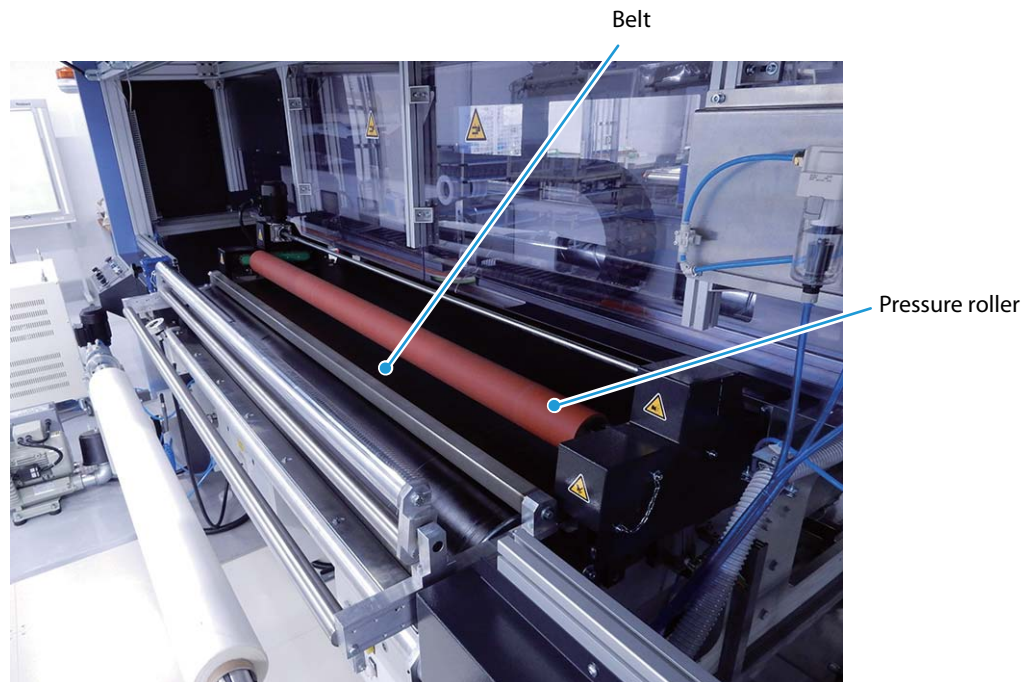

- 3 Close the rear protection cover of this machine.

Checking the Exhaust Equipment

Check if the exhaust is flowing while the machine is running, in order to adjust the temperature and humidity of the machine.

The location and method of checking exhaust ducts will vary depending on the equipment that is used. For details, please check with the factory manager.

Pushing an Emergency Stop Button for an Emergency Stop

Push the emergency stop button to put the machine in emergency stop status, so that the print heads and motor do not operate suddenly when the power is turned on.


Emergency stop buttons are found in five locations around the machine. Firmly press one of these emergency stop buttons.



Turning On the Power

Turn on the power. Turn the [Main Power Switch] on the [Main Electric Box] to 1 (ON).

Confirm that the lamp (white) lights up.

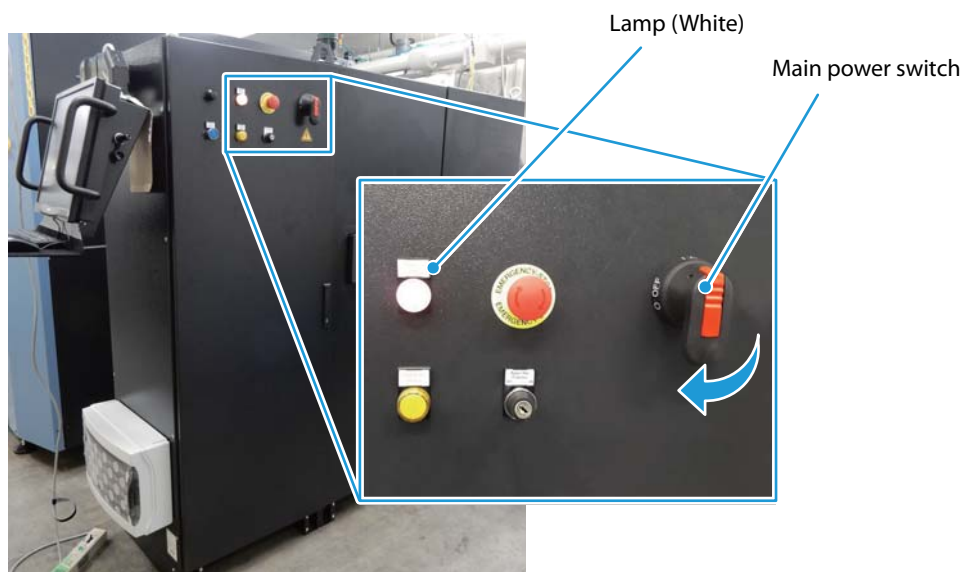


The red LED on the tower lamp also comes on.

Starting Leonardo

This machine is controlled by [Leonardo] on a [Control PC].

- 1 When the power to the machine is turned on, the [Control PC] starts. Wait for Windows to start on the PC.
- 2 The Windows startup screen appears on the display of the control PC. After Windows starts, Double-click the [Leonardo] icon on the desktop to start [Leonardo].

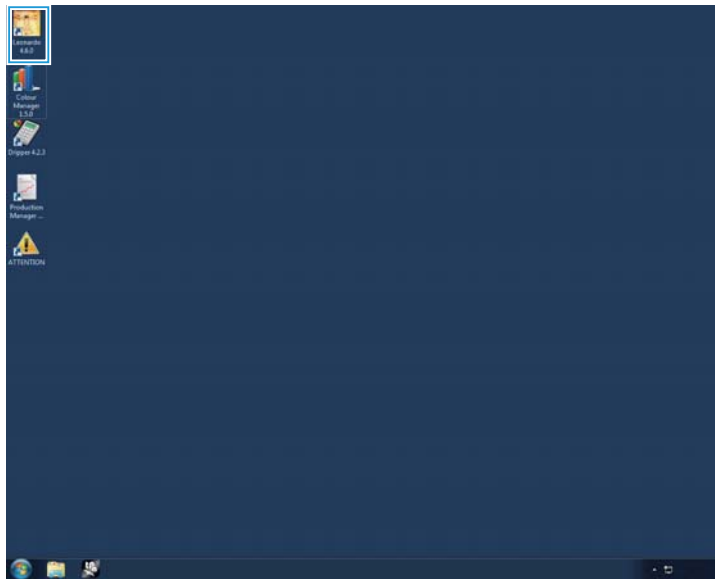

CAUTION

Do not add Leonardo to the Startup settings in the OS. Leonardo may not function properly if added to the Startup settings.

- 3 When [Leonardo] starts, the "Machine in Emergency" and "Ready to start" messages are displayed on the status bar.



Releasing an Emergency Stop Button

Turn the [Emergency Stop Button] to the right to release the emergency stop status.





Set Point cannot be executed if any emergency stop button has been pressed or if the cleaning tank is pulled out because the emergency stop condition has not been released. Confirm that the emergency stop condition has been released at all of the following emergency stop buttons and the cleaning tank.

- Five emergency stop buttons of this machine
- Emergency stop buttons for devices linked to this machine (If there are linked devices)
- Belt cleaning tank

When returning the belt cleaning tank to the original position, check if the two fasteners on the belt cleaning tank are touching the machine, and if the belt cleaning tank is touching the belt cleaning unit position sensor.

If there is a gap between the two fasteners on the belt cleaning tank and the machine, or if the belt cleaning tank is not touching the belt cleaning unit position sensor, the machine enters the emergency stop condition and will not operate.

Fasteners on the belt cleaning tank

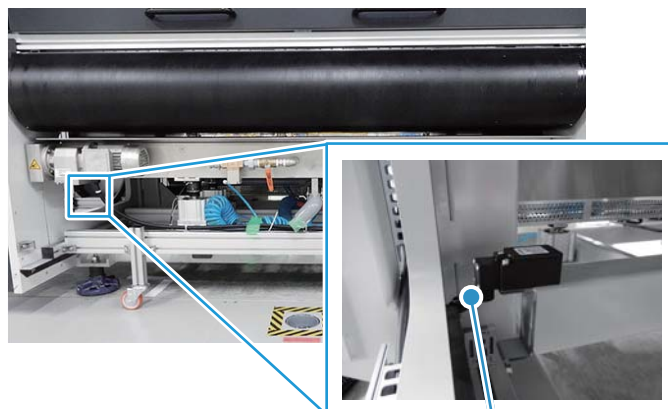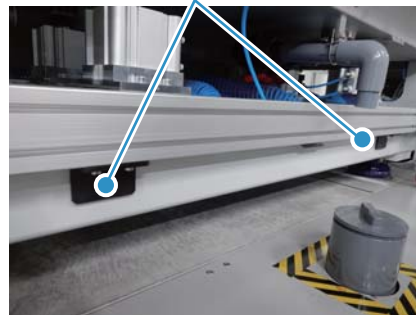

Belt cleaning unit position sensor

Executing Set Point


Set a [Set Point] (origin position) before printing in order to print at the correct coordinates.

Immediately after turning on the power, releasing an emergency stop button, replacing fabric, adjusting the print heads, and/or performing head cleaning, be sure to execute Set Point before printing.

1 In Leonardo, click the [Setpoint] icon.



2 Press the reset button on the main electric box.

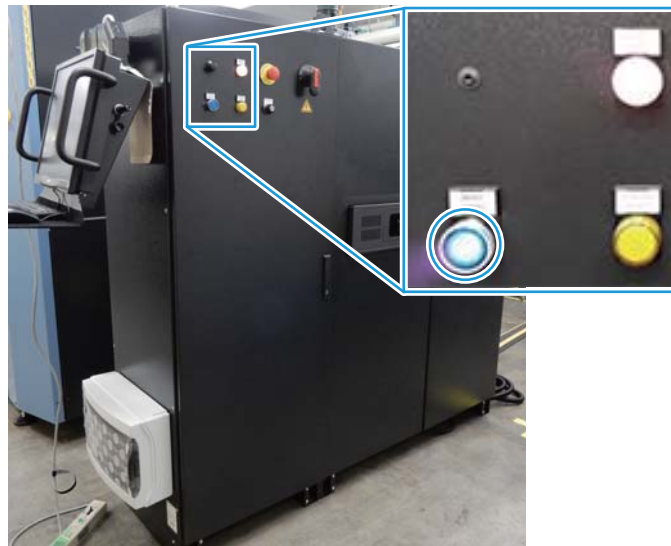

3 The print heads move, and the origin position is set. At this time, [Setpoint in progress] is displayed in the status bar of Leonardo and the tower lamp changes from red to white.

When [Setpoint] is completed, the tower lamp changes from white to green.



If the print heads do not operate even after executing Set Point, please confirm the following.

- All of the emergency stop buttons have been released.
 - * Five emergency stop buttons of this machine.
 - * Emergency stop buttons for devices linked to this machine (If there are linked devices).

Check the Operation of the Emergency Stop Equipment

Check all emergency stop functions in the system.

Checking the Emergency Stop Buttons on the Machine

- 1 Press an [Emergency Stop Button].
- 2 Confirm that "Machine in emergency" is displayed on the status bar in Leonardo, and that the tower lamp is red.
- 3 Turn the [Emergency Stop Button] to the right to release the emergency stop status.



- 4 Executes Set point.
See ["Executing Set Point" on page 46.](#)
- 5 Confirm that the tower lamp is green.
- 6 **There are five emergency stop buttons around the machine.
Repeat procedures 1 to 5 to check the operation of each emergency stop button.**



Checking the Emergency Stop Functions in the System

If the system is linked with the emergency stop system of other equipment, check if the system's emergency stop function for that equipment is operating normally.

Checking the Emergency Stop Function of the Cleaning Tank

- 1 Pull out the cleaning tank.**
- 2 Confirm that "Machine in emergency" is displayed in the status bar of Leonardo and that the tower lamp is red.**
- 3 Return the cleaning tank to the original position.**
Check if the two fasteners on the belt cleaning tank are touching the machine, and if the belt cleaning tank is touching the belt cleaning unit position sensor.

Fasteners on the belt cleaning tank

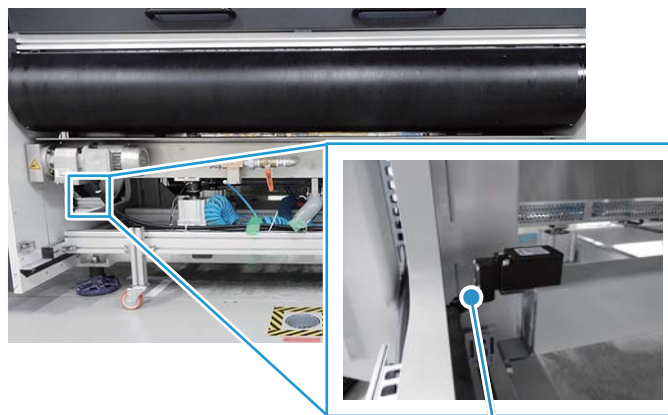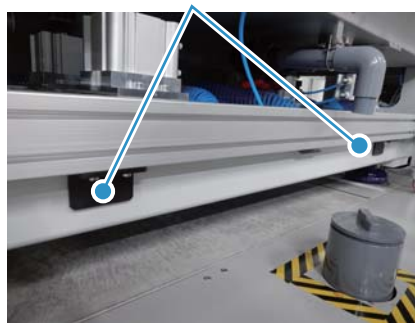

Belt cleaning unit position sensor

- 4 Execute Set Point.**
- 5 Confirm that the tower lamp is green.**

Inspect for Leaks in the Ink Path

Inspect if there are any ink leaks in each ink path.

Print heads

Visually check the area round the [Print Heads] on the front of the machine.



Ink rack

Visually check the area round the ink rack on the rear left side of the machine.



Inspect the Open Cover Detection

Front Protection Covers

Open each of the 3 protective covers on the front of this machine and confirm that "Front protection open" is displayed on the status bar in Leonardo.

Rear Protection Covers

Open each of the 3 protective covers on the rear of this machine and confirm that "Rear protection open" is displayed on the status bar in Leonardo.

Nozzle Check

Before printing, perform a nozzle check to make sure the nozzles are engaged. If a nozzle is not engaged, perform head cleaning.



Use an acrylic board for the nozzle check, because the ink grains are very fine. Fabric can also be used, but makes it difficult to determine if a nozzle is not engaged.

Items required:

- Acrylic board
- Ruler / tape measure (to measure the distance from the edge of the print area to the edge of the paper)

Setting the Acrylic Board

This step is not necessary when printing directly on fabric.


- 1 Open the front protection cover.**
- 2 Affix the acrylic board to the printing area. Affix the acrylic board along the right edge, because the origin of the print heads is on the right side.**



The horizontal printing margin can be set in Leonardo, and therefore it is not necessary to set the right edge of the printing area to the affixing position.




3 Measure the distance from the edge of the belt (right side).

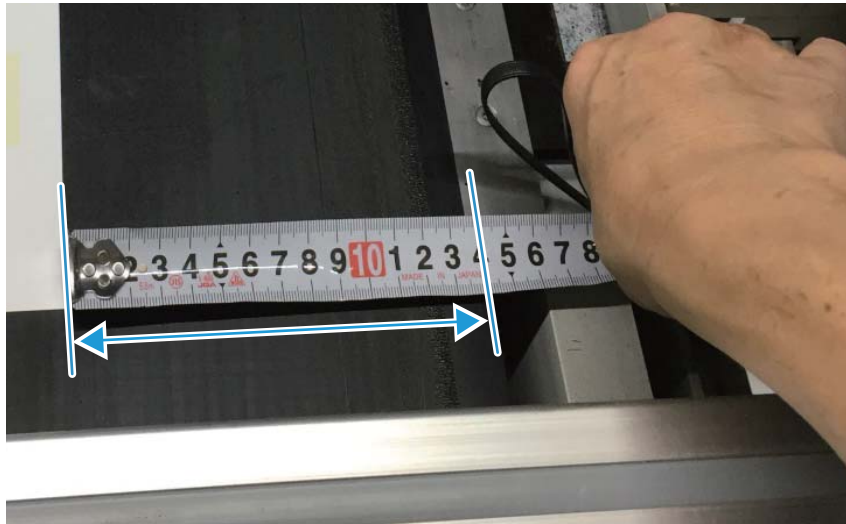

4 Close the front protective covers.

Printing the Nozzle Check Pattern

Set the print start position and ink size in [Maintenance].

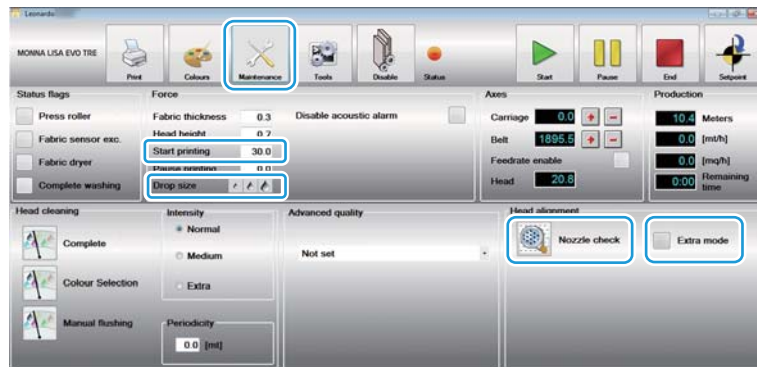


Item	Description
Start printing	Enter the length from the right edge of the printing area to the point where printing begins. (Units: mm)
Drop size	Select the drop size. If the check pattern is too fine and difficult to determine, select Large.
Nozzle check	Prints the check pattern.
Extra mode	Increase the amount of ink for the check pattern.

Click [Nozzle check] to print the check pattern.

Confirmation Method

Check the nozzle check pattern that is printed.

If all nozzles are engaged and operation is normal, all of the lines will be printed.

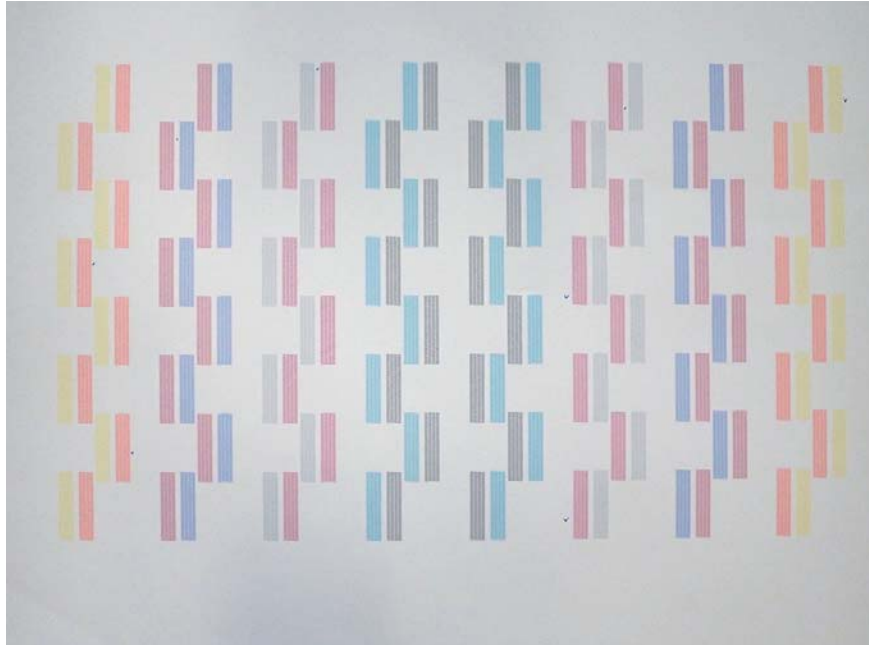

If a nozzle is not engaged (there are areas that are not printed), actual printing could be affected. In that case, perform head cleaning.

If the nozzle check pattern has mixed colors, perform manual flushing. For more information, refer to "[Manual flushing](#)" on page 104.

Head Cleaning

Use one of the following procedures to perform head cleaning.

- Cleaning with Leonardo (recommended)
- Manual cleaning: Refer to the "Maintenance Guide".

Cleaning with Leonardo

Make the required settings in the [Maintenance] menu to perform cleaning.

1 Click [Maintenance].



2 Under [Intensity], select the strength of head cleaning.



Item	Description
Normal	Use this setting for standard head cleaning.
Medium	Use this setting if the problem is not resolved on the Normal setting. A greater amount of ink is used than for the Normal setting.
Extra	Use this setting if there are bubbles in the ink tube. Because most of the ink in the ink path is discharged, this setting uses a very large volume of ink.



Set the Intensity to Medium or Extra only when necessary.

3 Under [Head Cleaning], select the heads to be cleaned, and then start head cleaning.



Item	Description
[Complete]	This setting cleans all of the heads.
[Colour Selection]	Select the ink colors for which you want to perform cleaning.

Print Workflow

This section describes the workflow for printing.

Workflow

Setting the Fabric

1. Set the Fabric ([Page 57](#))
2. Set the Foreign Material Detection Sensor ([Page 76](#))
3. Set the Printer ([Page 78](#))

Printing

1. Load the Print Data ([Page 80](#))
2. Set the Print Data ([Page 82](#))
3. Printing ([Page 84](#))
4. Stopping Printing ([Page 86](#))

Others

1. Replace the Ink ([Page 87](#))
2. Changing User Permissions ([Page 93](#))
3. Check the Belt Cleaning Unit Operation ([Page 94](#))

Set the Fabric

Installing the Fabric



WARNING

The fabric must be as smooth and firm as possible. If the fabric edge is fraying and threads are loose, the fiber may come into contact with the head, damaging the head. In the same way, be sufficiently careful to prevent protrusions and fraying at the seam between pieces of fabric.

1 Open the rear protective cover.



WARNING

The machine can operate at a decelerated rate even when the rear protective cover is open. However, use this only in special circumstances. Be particularly careful to avoid your finger being pulled or crushed by the moving pressure roller.


When you open the rear protective cover, the machine decelerates for operation, and the rotary beacon light flashes in orange to notify you.

2 Confirm that the pressure roller is lifted up. If the pressure roller is lowered, turn the selection switch (black) to the left and lift up the roller.

3 Remove the fabric spindle for procedures 3 to 6. Rotate the fabric spindle and align it with the lock release position.

Correct position

Air inlet is visible

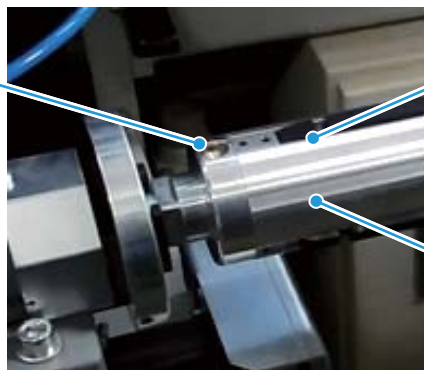


Stopper

Fabric spindle


Incorrect position

Air inlet is not visible

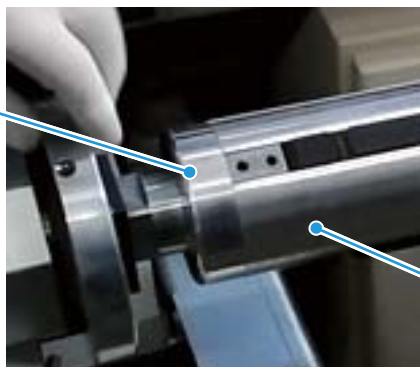

Fabric spindle

- 4 Press the center of the air inlet of the spindle to release the air and loosen the spindle stopper.
- 5 Release the locks on the left and right sides of the feeding unit. This allows the fabric spindle to be removed.

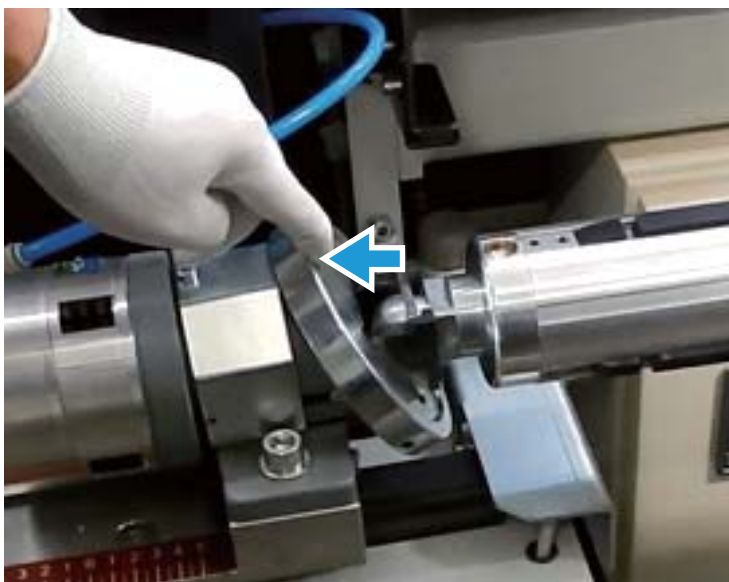

- 6 Remove the fabric spindle, and replace the fabric.
- 7 Set the new fabric on the spindle.


**CAUTION**

Fabric rollers that weigh 20 kg {44.1 lb} or more should be set by two people.


- 8 Set the fabric in the feeding device. Fit the fabric spindle into the groove on the feeding device.




9 Lock the feeding device.

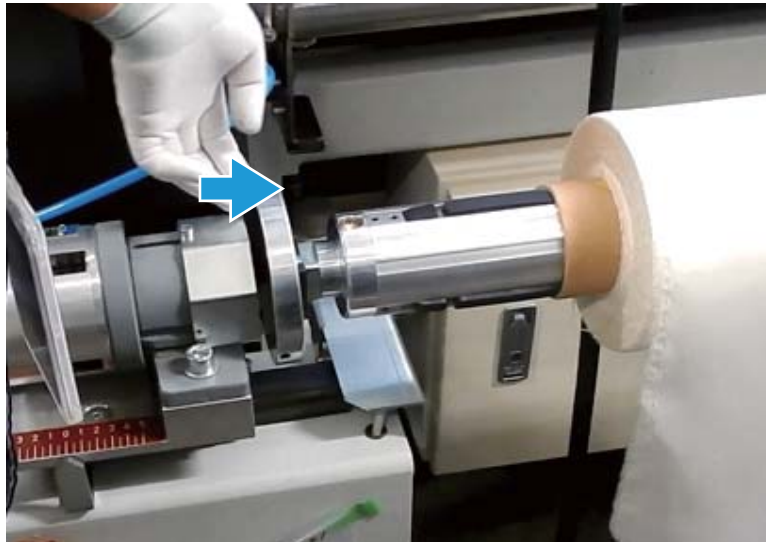

10 Adjust the lateral position of the fabric. Align the fabric center with the printer center.

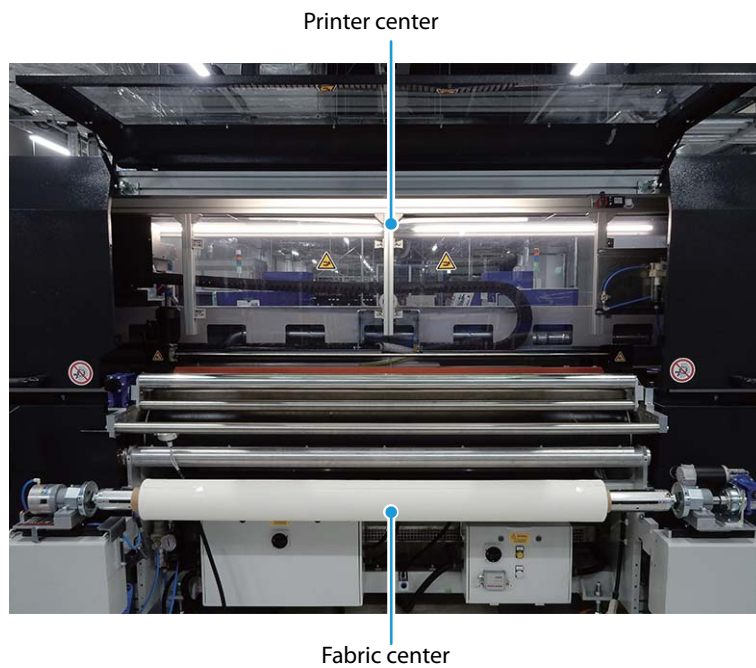


11 Insert the air expansion tool into the air inlet on the spindle and inject air. The stopper on the spindle swells to fix the fabric.

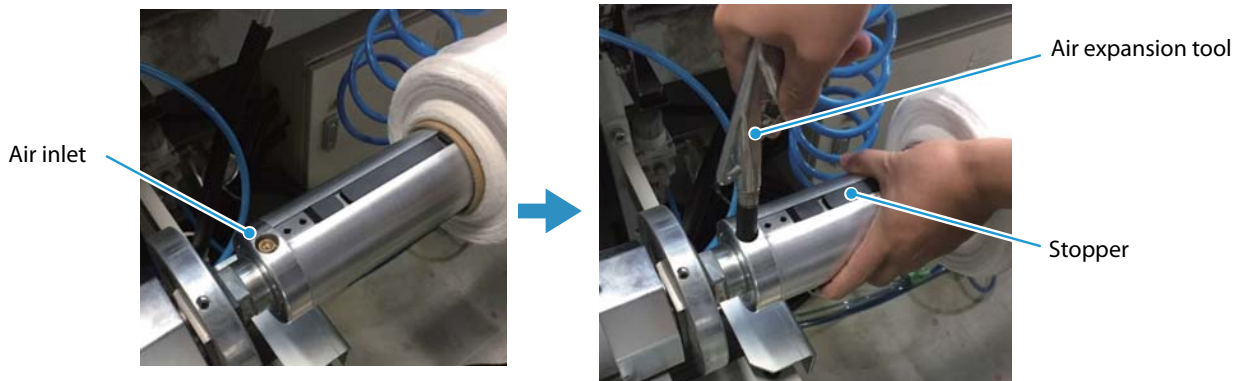


12 Feed the fabric through the roller as shown in the following image.



Cross-section of fabric path

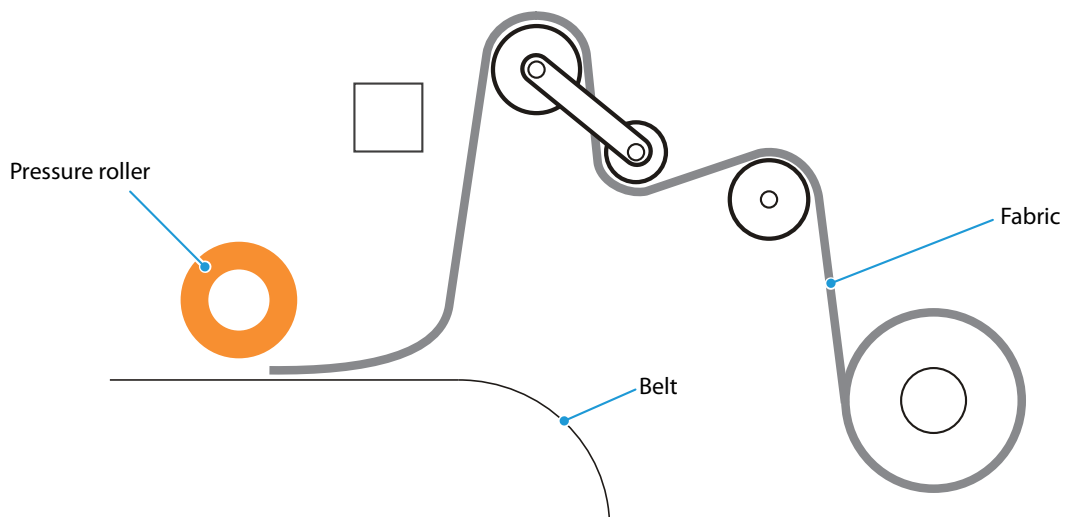

13 Affix the fabric to the belt.

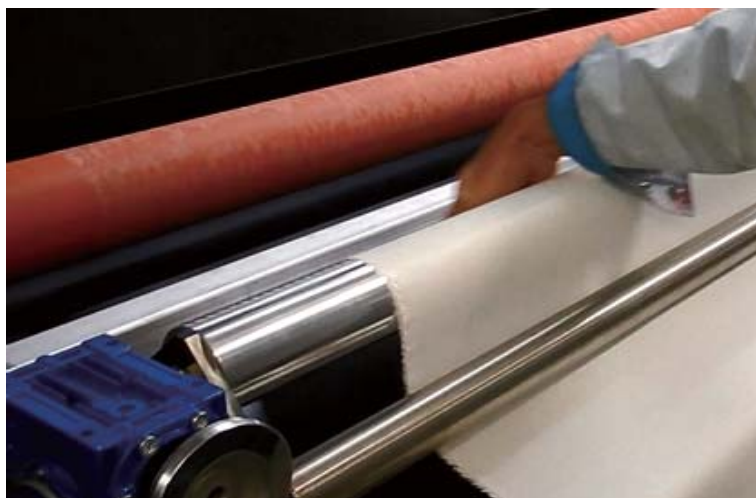

14 Press the belt feed button (forward) on the rear panel to feed the fabric to the edge of the pressure roller.

15 Turn the selection switch (black) to the left and lift up the pressure roller.

16 Turn the switch on the fabric tension adjustment panel to the right to lock the spindle. The spindle does not move even if the fabric is pulled.

17 Pull the fabric from the front of the pressure roller to remove any slack in the fabric on the left and right.



18 Turn the selection switch (black) to the left and lower the pressure roller.

**WARNING**

The descent speed of the pressure roller is slow, and it comes down gradually. However, be sufficiently careful not to place your hands or fingers under the roller.

19 Affix the fabric that was pulled from the top of the pressure roller to the belt.



20 Close the rear protective covers.

21 Turn the pressure selection switch (black) to the right so that the fabric is affixed to the belt, without any areas where the fabric has lifted up. Move the pressure roller forward and back to affix the fabric to the belt.

This completes the work on the rear. Next, perform the work on the front.

22 Press the belt feed button (forward) to feed the fabric forward.



23 Install the fabric on the winder. Feed the fabric as necessary.



If there is enough length in the fabric edge, feed the fabric until the dryer and hold the fabric edge down with the roll core installed in advance on the take-up device or take-up unit. (If taking up, use adhesive tape.)

This completes the procedure for installing the fabric.

Slack Mode

Printing on knits and other fabrics that stretch and shrink can cause the fabric to be pulled and stretched. Use slack mode when printing on fabrics that stretch and shrink.



In the following cases, slack mode might not function correctly because the sensors fail to detect the slack part of the fabric when it sways from moving air.

- When moving air is generated around the machine due to exhaust from peripheral devices or the passage of people
- When printing on thin fabrics

Under such conditions, put a core into the slack of the fabric to prevent the fabric from swaying. Use a core that is heavy enough to prevent the fabric from stretching. If the core is too heavy, the fabric will stretch and wrinkle when printing.

1 Turn on the power at the electric box on the left rear side of the machine.




2 Press the button (blue lamp) on the rear panel. The button lights up.



- 3** Turn the slack detection switch to 1 (ON).
The switch lights up.




- 4** Turn switch ① on the fabric tension adjustment panel to the right to turn on fabric tension adjustment.

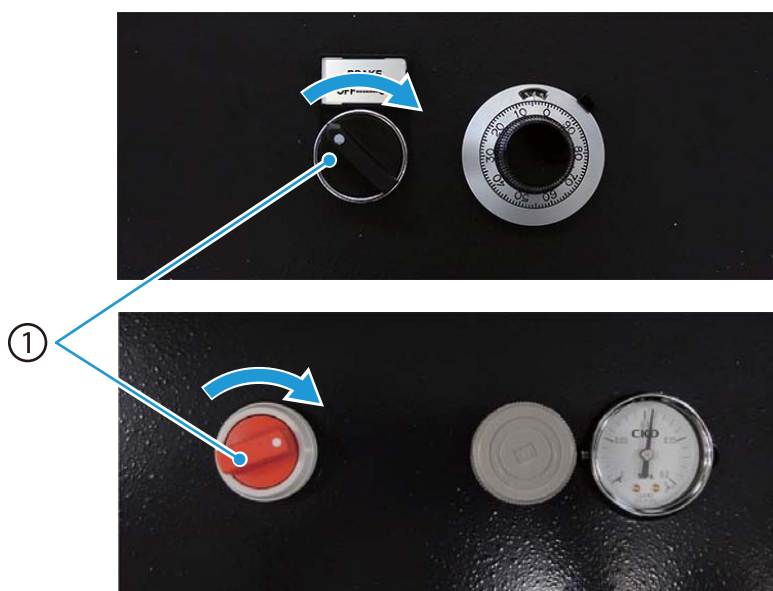


- 5** Load a fabric roll onto the feeding unit.
For more information, refer to ["Installing the Fabric" on page 57](#).

- 6** Turn dial ② on the fabric tension adjustment panel to the right, adjusting the fabric tension until the spindle does not rotate from the weight of the fabric roll and the fabric can be pulled out without resistance.

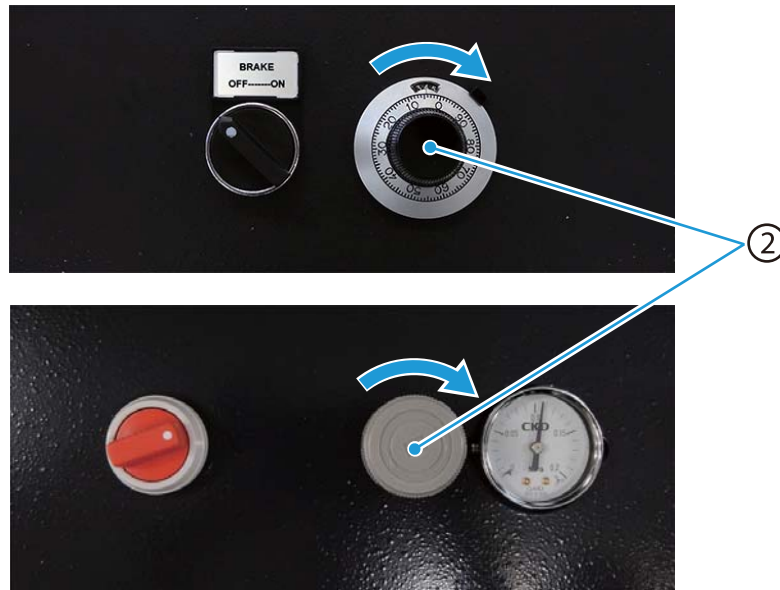


- 7** Put the core into the slack of the fabric.

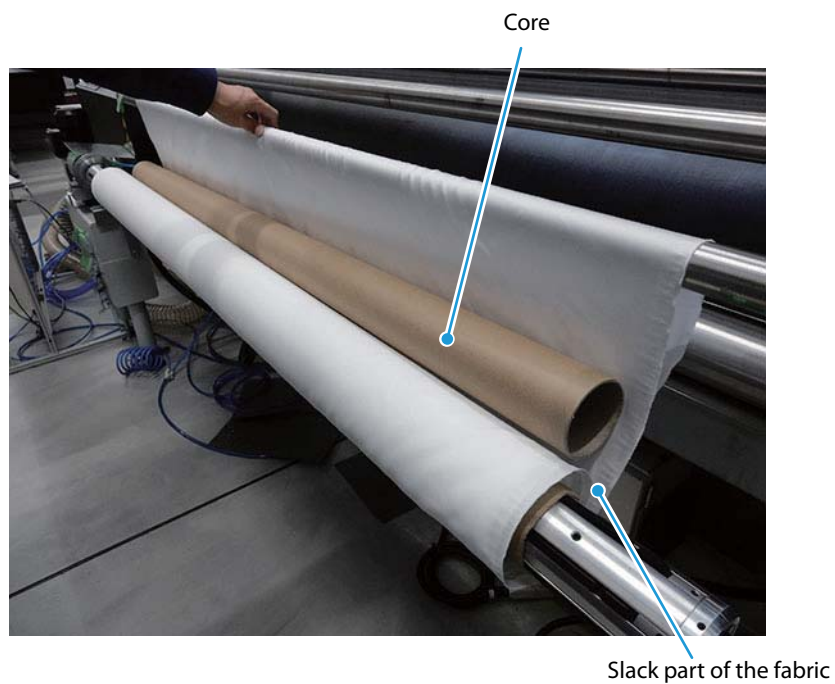

- 8** When printing on the inner side of the fabric, turn the slack adjustment switch to the left. When printing on the outer side of the fabric, turn the slack adjustment switch to the right.


The spindle for the feeding device will rotate and the fabric will begin to have slack.

The following procedures describe how to print on the inner side of the fabric.

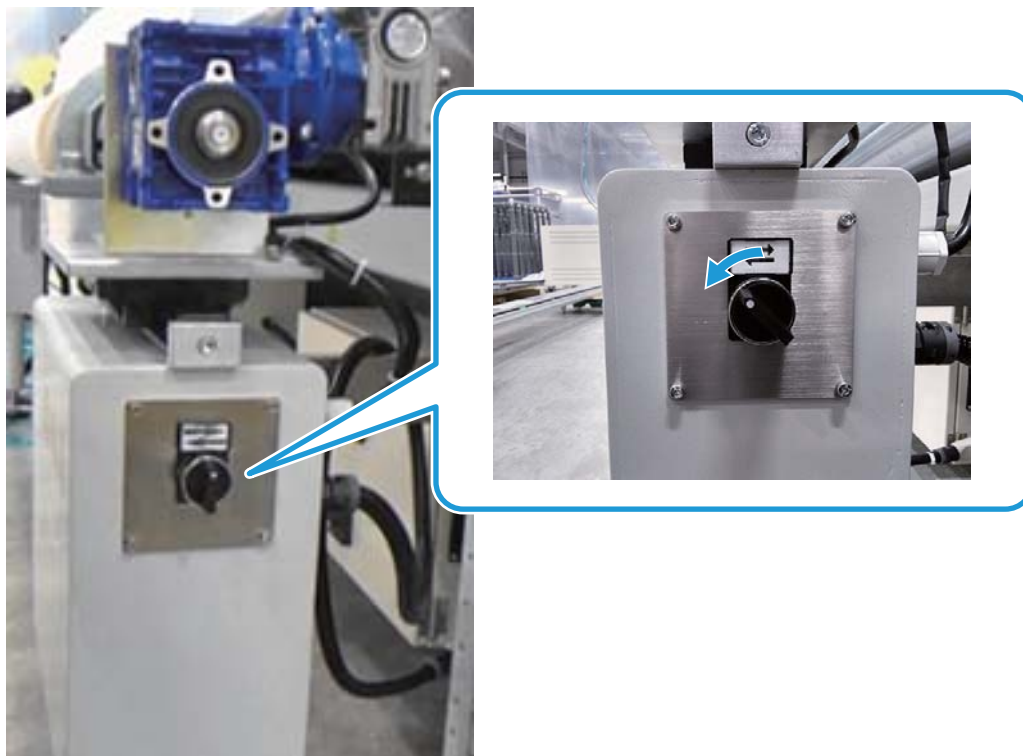

- 9** When the fabric hangs down to the height of the slack sensor, the machine automatically stops.

The amount of slack is detected by the slack sensor in the rear lower center. If the belt moves and lifts up the fabric causing there to be not enough slack, slack is given to the fabric until the sensor detects the fabric.

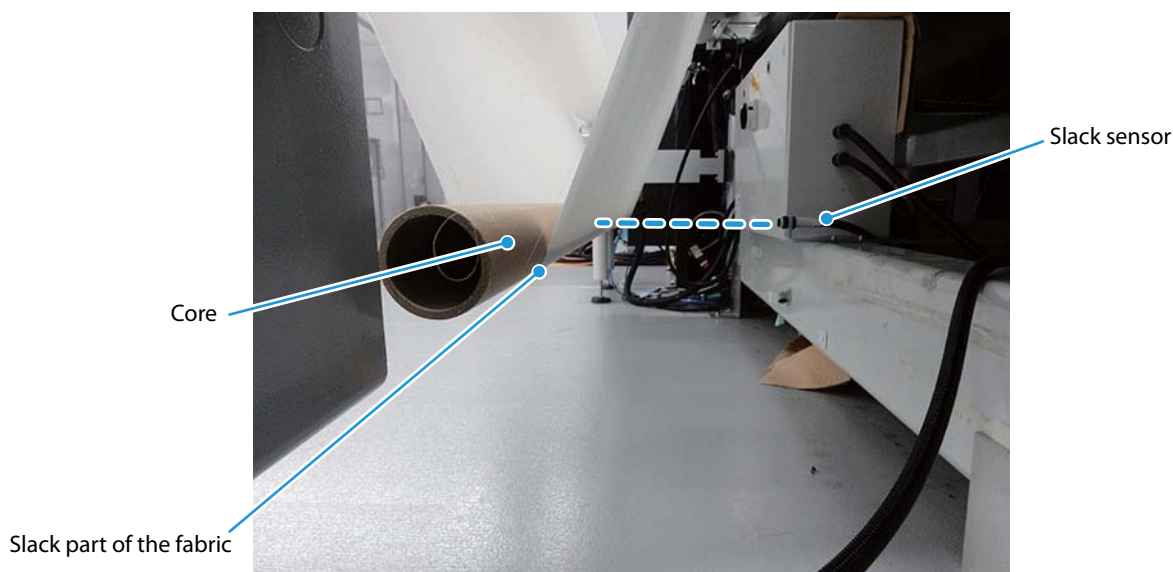


When the slack sensor does not detect the fabric

If the machine does not stop automatically even though the fabric hangs down to the height of the sensor, the fabric might be too far from or too close to the sensor. Adjust the distance between the sensor and the fabric.

1 Turn the slack adjustment switch to the center.

Slack mode stops.

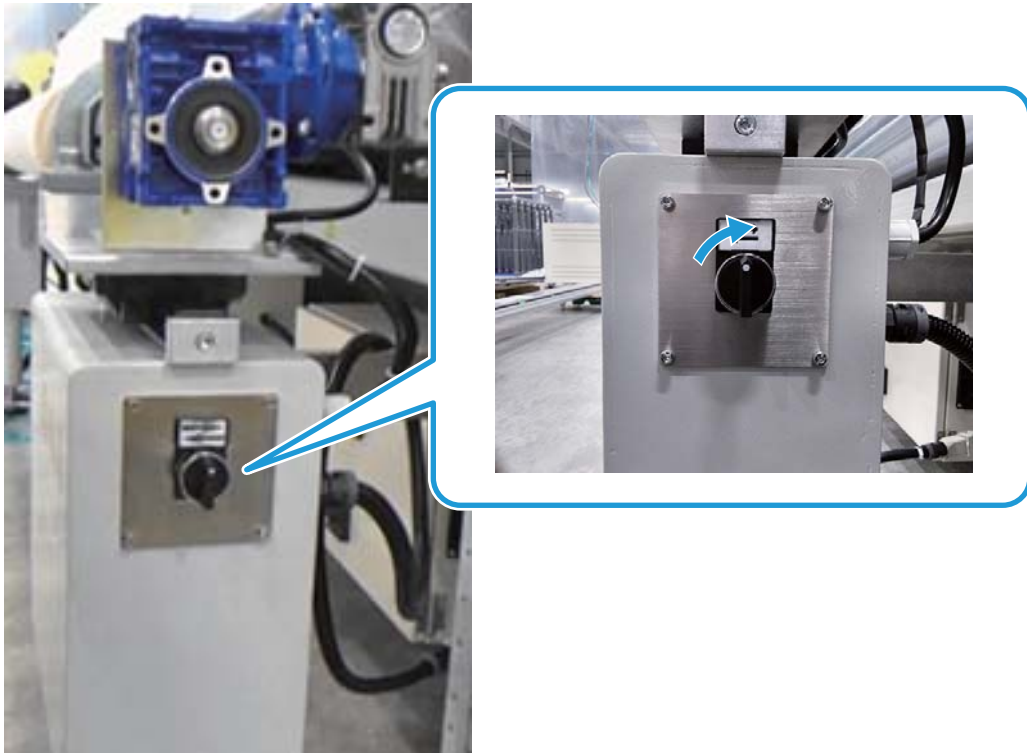


2 Loosen the two knob screws on the slack sensor.



- 3** Adjust the distance between the slack sensor and the fabric to between 50 and 150 mm {1.97 and 5.9 in}.



- 4** Tighten the two knob screws on the slack sensor.
- 5** Turn the slack adjustment switch to the left.
The spindle for the feeding device will rotate and the fabric will begin to have slack.

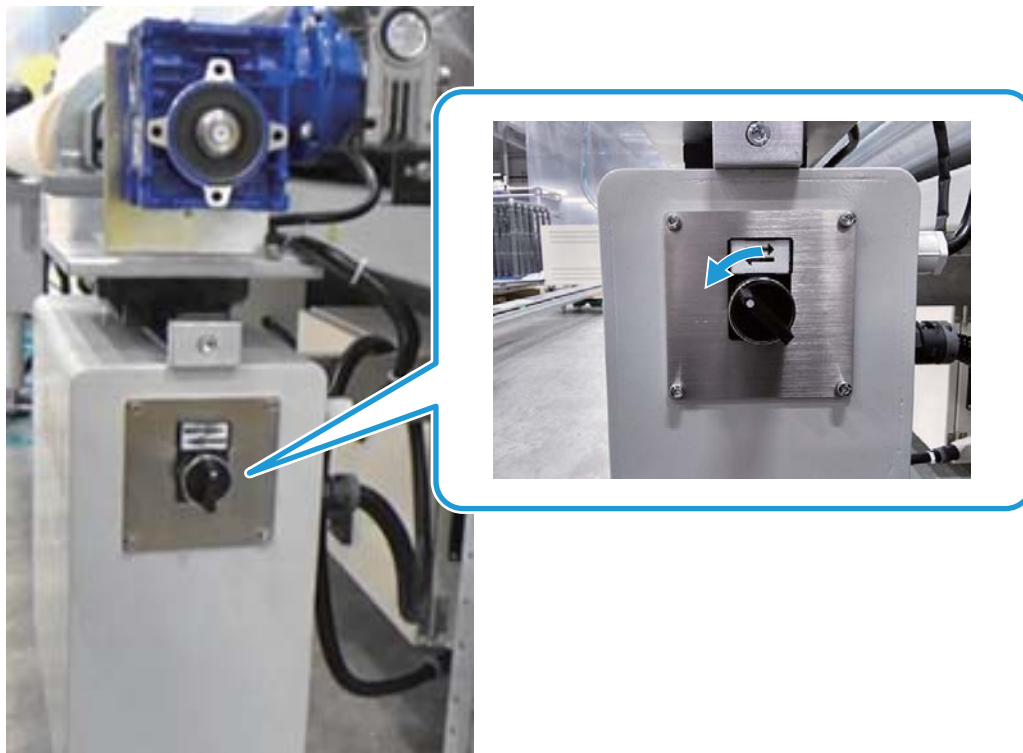


- 6** Confirm that the machine automatically stops when the fabric hangs down to the height of the slack sensor.

Fabric Meandering Correction

If you load a fabric roll with uneven edges, the fabric will meander. Either wind the fabric again or follow the procedures below. If the unevenness for edges of the fabric is severe, wind the fabric again.

- 1 Turn on the power at the electric box on the left rear side of the machine.

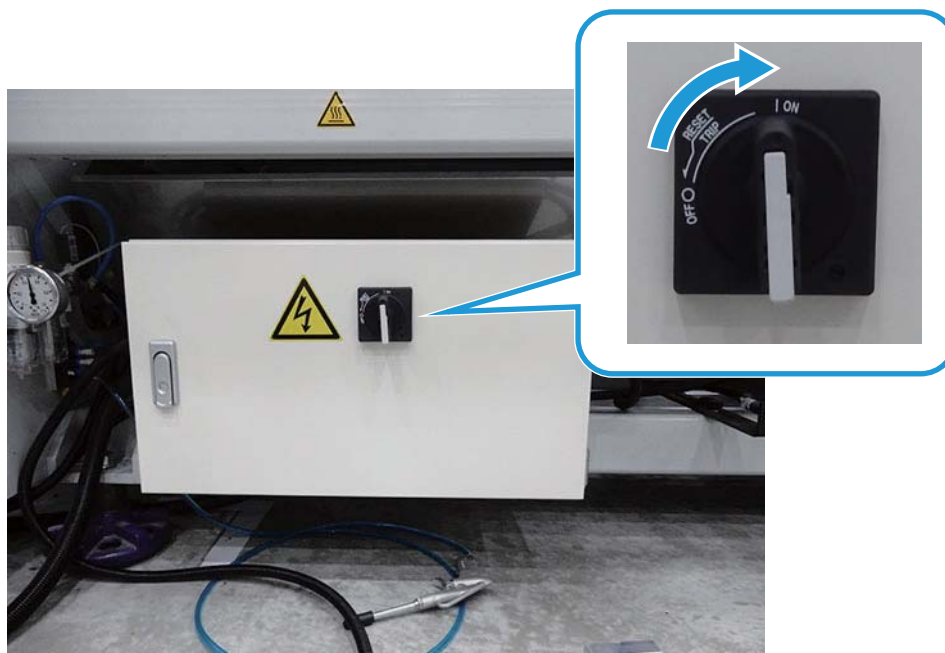


- 2 Press the button (blue lamp) on the rear panel.
The button lights up.



- 3** Turn the selection switch on the rear panel to MAN.





- 4** Use the selection switch to set the memory of the feeding unit to 0.
Turn the selection switch to SX to move the fabric spindle to the left, and to DX to move it to the right.

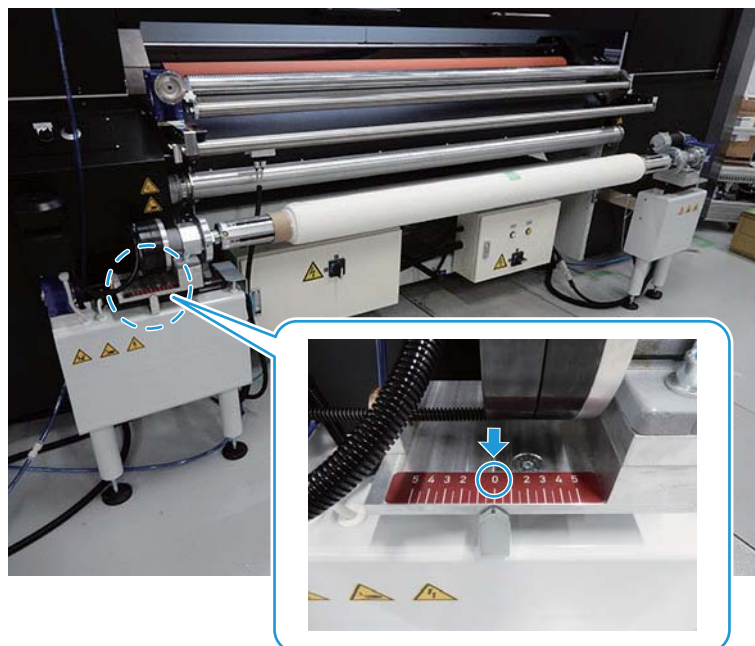

5 Adjust the position of the fabric edge sensor unit so that the left edge of the fabric is centered between the two sensors.

Loosen the knob screw to move the fabric edge sensor unit to the left or right. Align the fabric edge sensor unit with the left edge of the fabric, and then tighten the knob screw to secure it.

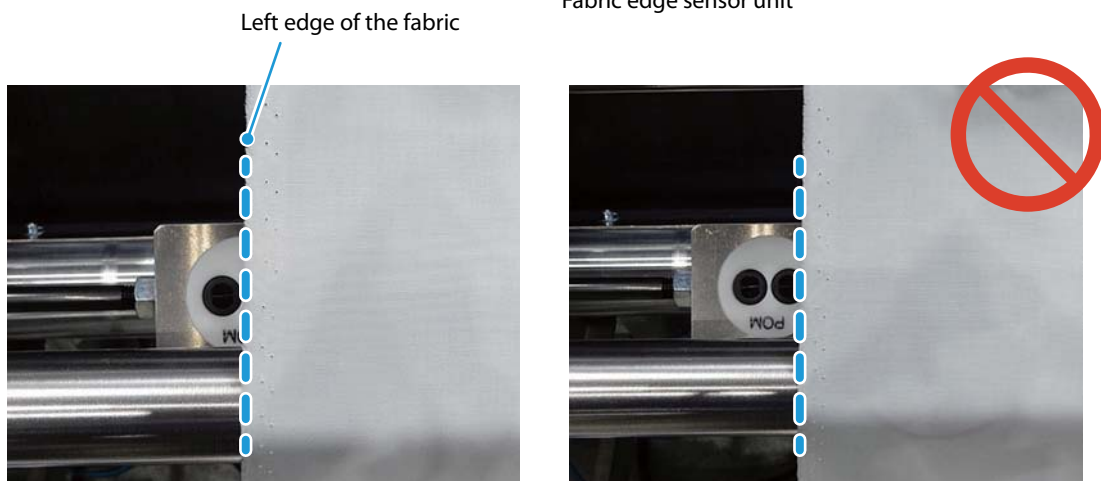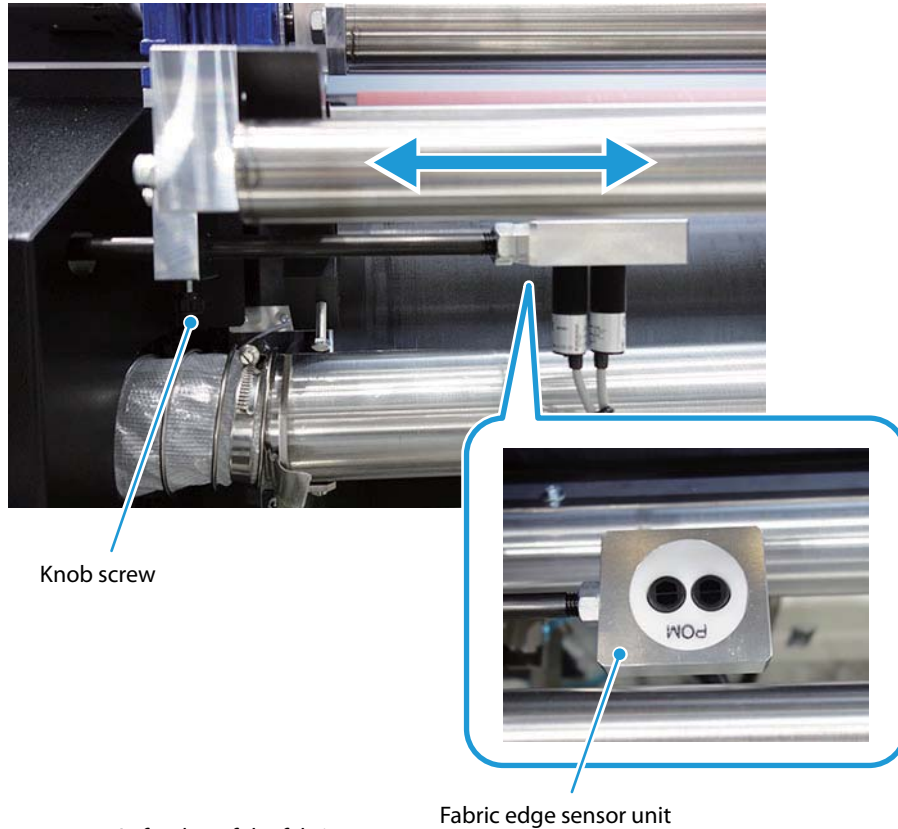


- 6 Turn the selection switch on the rear panel to AUTO.**
The meandering of the fabric is automatically adjusted when printing starts.



Precise correction of meandering fabric

Use the following procedures to more precisely correct meandering fabric.

- 1 Use a hex wrench (2.5 mm {0.1 in}) to loosen the sensor adjustment screw.**

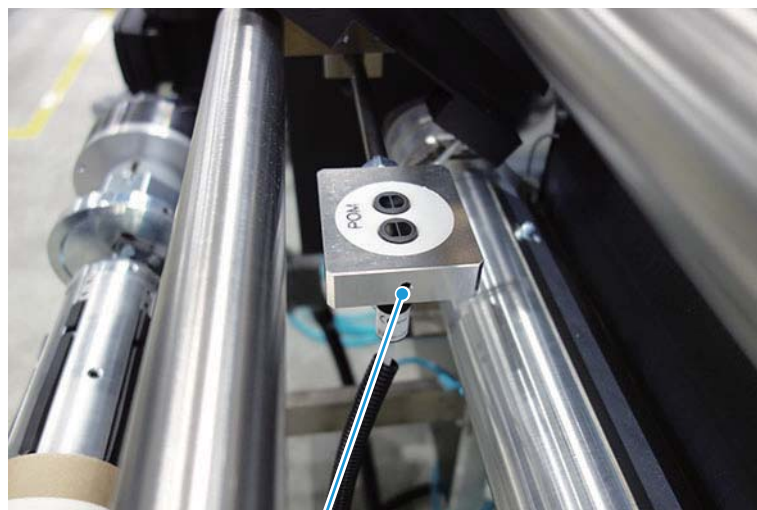


Sensor adjustment screw

2 Rotate the fabric edge sensors to the right to make the detection range more narrow.



Do not rotate the sensors more than 90° to the right. Otherwise, the sensors will be switched left to right, and it will not be possible to correct meandering.

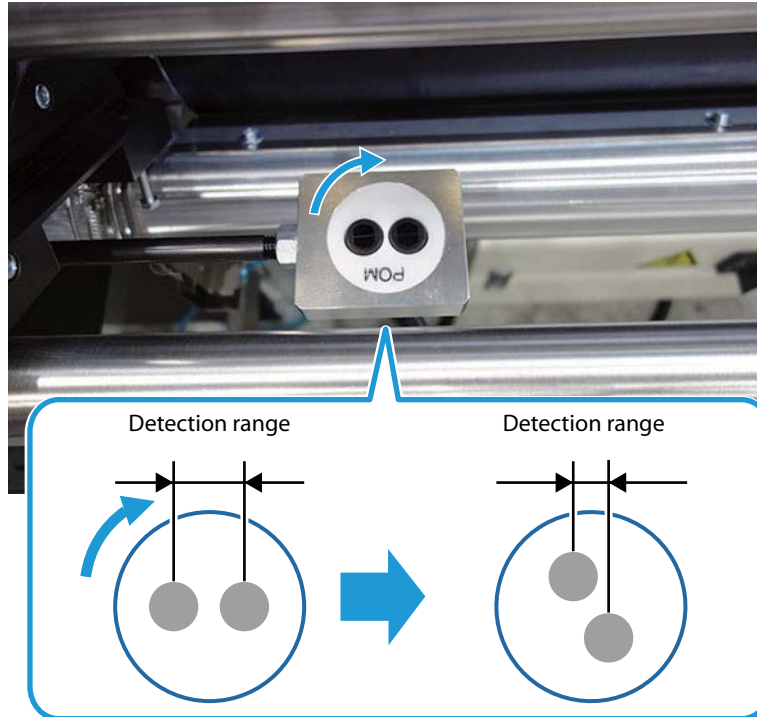


3 Use a hex wrench (2.5 mm {0.1 in}) to tighten the sensor adjustment screw.

To return the sensors to the original detection range, rotate the fabric edge detection sensors to the left.



Do not rotate the sensors to the right. Otherwise, the sensors will be switched left to right, and it will not be possible to correct meandering.

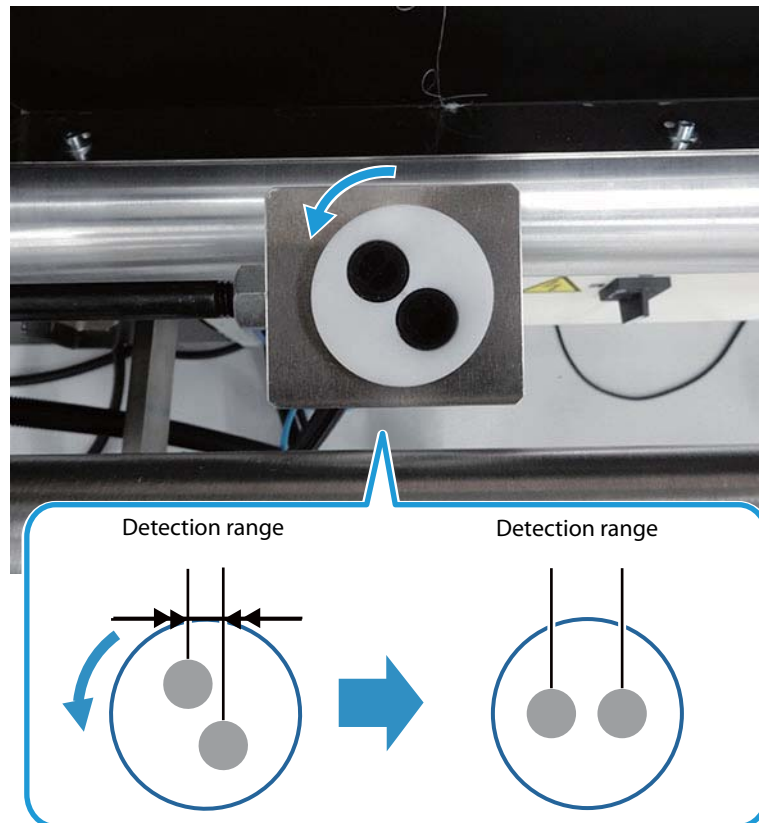

Set the Foreign Material Detection Sensor


Set the foreign material detection sensor. When loading the fabric for the first time or changing the fabric type or thickness, you need to set the sensor. This sensor prevents the heads from colliding with foreign material on the fabric, or areas where the fabric has been lifted up.




Sensor position

Set the display for the foreign material detection sensor on the front panel on the front of the machine. Open the cover on the display.



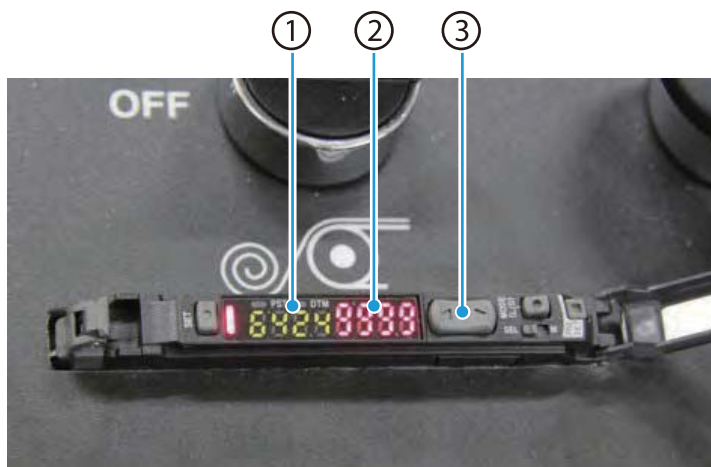

No.	Name	Description
1	Green counter	This is the setting for the threshold value. If detected value falls below this number, an error occurs and printing stops.
2	Red counter	Displays the height of the fabric, measured with a laser.
3	Selector	Use the selector to set the height. Press + to increase the value for the green counter, and press - to decrease the value.

	<p>Recommended setting: Set a value that is 2000 less than the red counter.</p> <p>Setting example: If the red counter is set to 4500, set the green counter to 2500.</p>
---	---


Set the Printer

Configure the settings in the Print menu.

Set the Fabric Thickness and Head Height


Set the fabric thickness and head height according to the fabric that is used.

These settings are very important. Since the print heads discharge ink while moving left and right, vertical lines might become misaligned or blurred if the distance from the print heads to the fabric is not set correctly. In addition, if the height of the print heads is too low, the print heads could collide with the fabric. This could damage the print heads and/or soil the fabric.

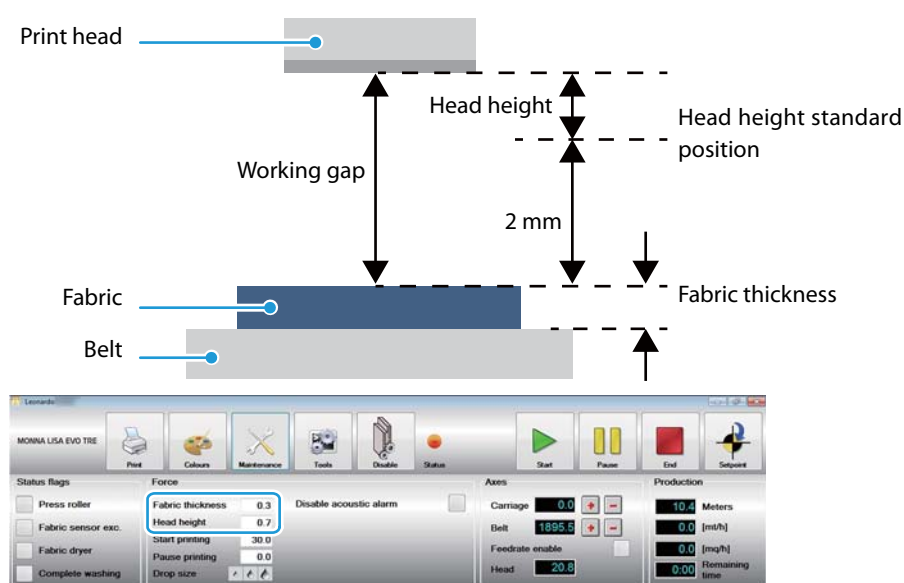


Fabric thickness: Set the fabric thickness. If the fabric does not have a consistent height, such as for shaggy fabric, enter the average value.

Head height: Set the head height.

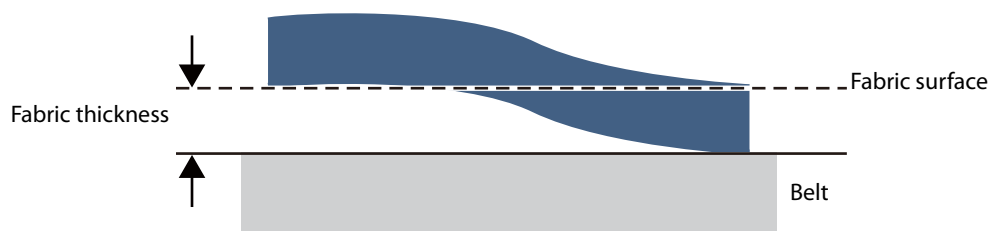

Set the Printer Equipment and Sensors

Set the printer.

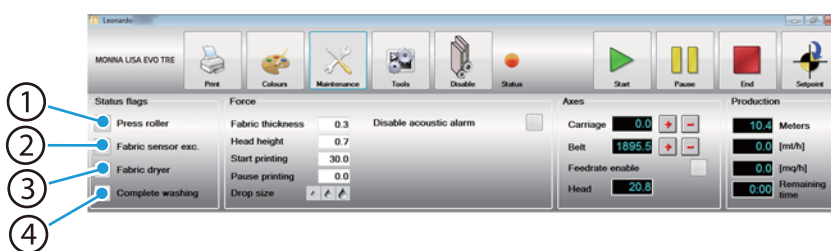


No.	Name	Description
1	Press roller	Select this flag to operate the press roller. This flag is selected automatically when printing is in progress.
2	Fabric sensor exc.	Unselect this flag to operate the foreign material detection sensor. This flag is unselected automatically when printing is in progress.
3	Fabric dryer	Select this flag to operate the belt heater. This flag is selected automatically when printing is in progress.
4	Washing	Select this flag to operate the belt cleaning system.



CAUTION

If the printer is stopped for a long period of time, disable the belt cleaning system and dryer. Otherwise, the heating process and drying process could damage the belt and cause the glue on the belt to become too dry.

Load the Print Data




To load print data into Leonardo, first copy the job files to a user-defined folder on the control PC. We recommend creating a folder named "Design" or something similar on the desktop of the control PC. To load job files from USB memory, connect the USB device to the USB port on the back of the display. To remove the USB memory from the control PC, perform the correct Windows operation to safely remove hardware.

1 Click [Load file] in the Print menu.




2 Follow the on-screen instructions to select a job file.
The information for the file that is loaded is displayed in the [Print] menu.

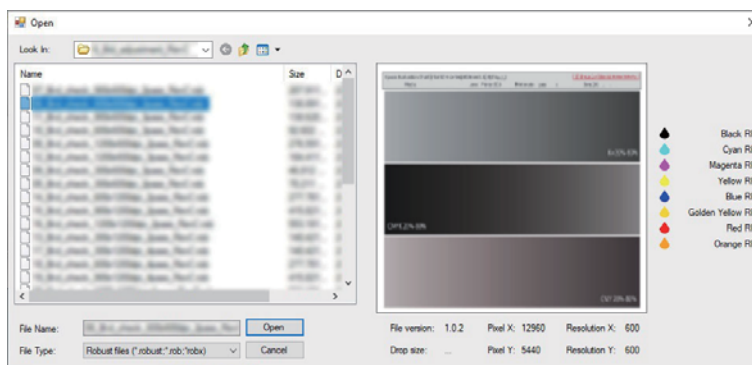

There is a character limit for file names.

When adding data, if the message is displayed but the file information is not displayed, reduce the number of characters in the file name, including the path, displayed for [File name] on the [Load file] screen. When using ASCII characters, limit the input to 251 characters.

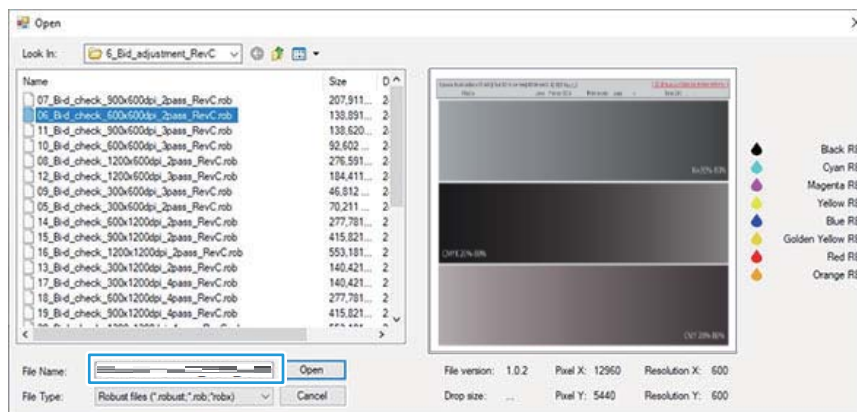

Some types of ROB file creation software may automatically generate a design file for color patches at the same time as the ROB file.

If there is a design file for color patches in the same folder as the ROB file and the design file for color patches has the same file name as the ROB file (ROBfilename_chips.rob), the design file for color patches is loaded at the same time the ROB file is loaded.

3 To load multiple job files, repeat steps 1 and 2.

Set the Print Data

Check the job file, and configure the settings if necessary.

Only the settings to be configured for printing are described here. For more information about job files, refer to the Appendix.



The resolution is set with Wasatch when the job file is created, and therefore cannot be set here. To change the resolution, create the job file again.

1 Set the number of passes. Use the slider on one of the bars to select a value.

Vertical resolution of 600 dpi: Left bar


Vertical resolution of 1,200 dpi: Right bar



2 Specify the printing direction for the print heads. Select [Bidirectional] for bidirectional printing.



3 Extra mode uses twice the amount of ink as Normal mode. Select [Extra mode] to print in this mode.

	Selecting Extra mode causes the print speed to drop.
---	--



Printing

Checking the Status of the Fabric

Check the status of the fabric.

- The fabric must be pulled into the print surface and spread out flatly.
- There must not be any folds or protrusions and the fabric must not be lifted up.
- If there is a seam between pieces of fabric, take measures to make it flat so that it does not scrape against the head.

Checking the Print Path

Check the print path.

- No foreign material in the print head operating area.
- There must not be any abnormalities in the fabric path or winding path.

Checking the Ink

Before printing, lift the ink cartridges in the ink rack by hand to check if they contain sufficient ink.

Configuring the Print Settings

Set the print length and the margin (right side) for when printing starts.



Item	Description
Start printing	Set the margin from the right edge. (mm)
Pause printing	Set the length from when printing starts until it stops. (m)

Check the length of the fabric to be printed on, and then enter a value at least 3 m shorter than the actual fabric length.

**WARNING**

For the following reasons, perform settings so that printing ends with 3 m or more of fabric left.

- If the ending edge of the fabric is not affixed to the core, the fabric can slip off the core, meaning it is not held by the brake or tension device and cannot properly adhere to the belt. If printing continues in that state, the fabric can become caught on the head and damage the head.
- If the ending edge of the fabric is affixed to the core, the belt is pulled by the piece at the end of the fabric, putting excessive strain on the belt motor. This could cause belt motor malfunctions.

**CAUTION**

We recommend always using the [Pause printing] option.

Using this option lets you set the length (meters) to be printed. When printing stops, the machine pauses and waits for the next command.



A test print should be at least 1 m, to check for banding due to misalignment of the print heads.

Print**1** Click the [Start] button.**2** If the "Enable belt cleaning" message is displayed, click [YES].**3** The print cycle starts. The printed fabric is fed to the belt on the take-up side of the machine front.

If there are any print quality problems, refer to ["Print Quality" on page 104](#).

Checking the Cleaning Unit

Confirm that water is provided to the cleaning unit and check the water level in the tank.

Printing Ends

After it finishes printing the set length, the printer stops in [PAUSE] mode.

After the printer stops, the operator can remove the fabric from the core that finished printing, then handle any issues such as folds in the fabric edge by hand.

Stopping Printing

When printing of the job files that were set when printing started is complete, the machine stops automatically. To stop printing before printing is complete, click [End] in Leonardo.



Replace the Ink

Checking the Amount of Ink

Use the [Colours] menu in Leonardo to check the amount of ink in the ink system.



Replace the Ink

The buzzer sounds when low ink is detected in this machine.


Use the following procedure to replace ink.




Replace the ink within five minutes after low ink is detected.
Continuing to print after ink low is detected without replacing ink will cause printing to stop when the sub-tank rack is empty.

- 1** In the [Colours] menu in Leonardo, check the number of the ink cartridge in which the ink is low.


Example: "Colour tank 4 empty" (The number in quotes is the ink cartridge number)

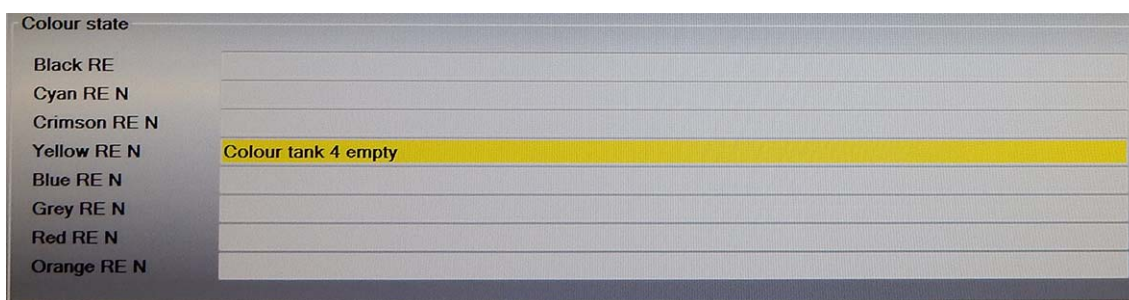


Ink cartridge numbers

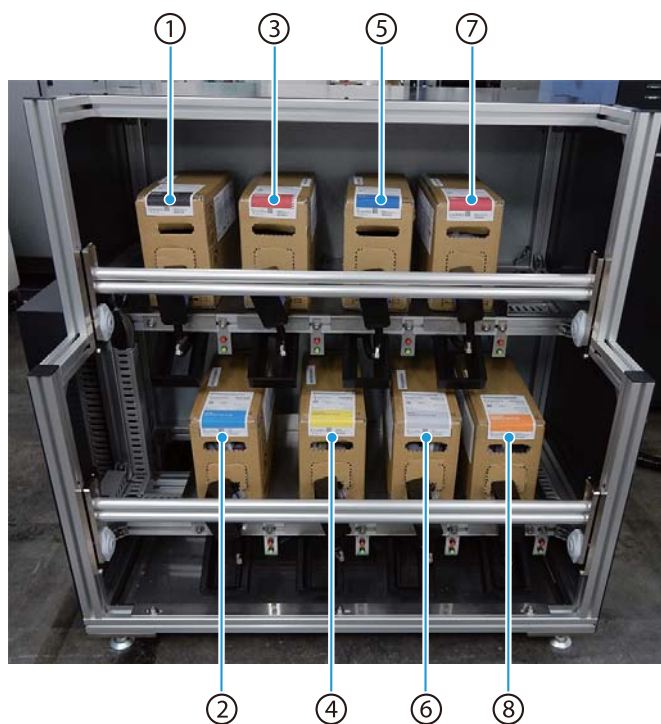


- 2 Double-click the ● icon for "Colour level alarm". The buzzer stops, and the ● icon changes from yellow to green.

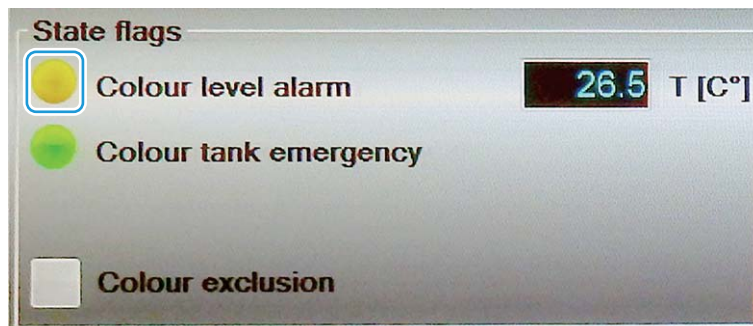

- 3 Check on the ink rack if the red LED of the corresponding ink cartridge is lit up.

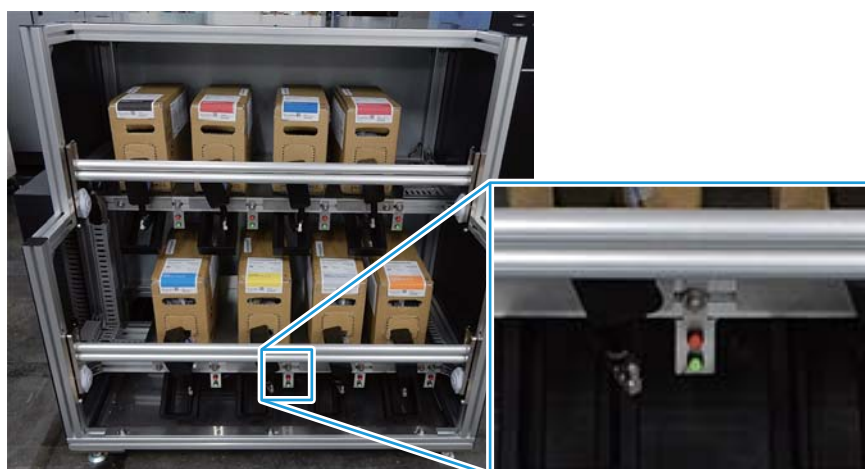

- 4 Prepare a new ink cartridge, and stir the ink. As shown in the figure below, (1.) place the cartridge with its widest surface facing upward and rotate it five times and then (2.) turn the cartridge over and rotate it another five times.

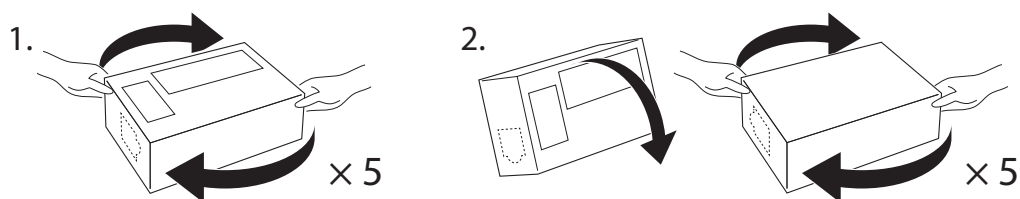

- 5** Place the ink cartridge as shown in the following image.




- 6** As shown in the figure on the ink cartridge, cut along the dotted lines by hand.




Do not cut any areas outside of the dotted lines.


- 7** Pull the nozzle out of the ink cartridge, and clip the tabs to the box.

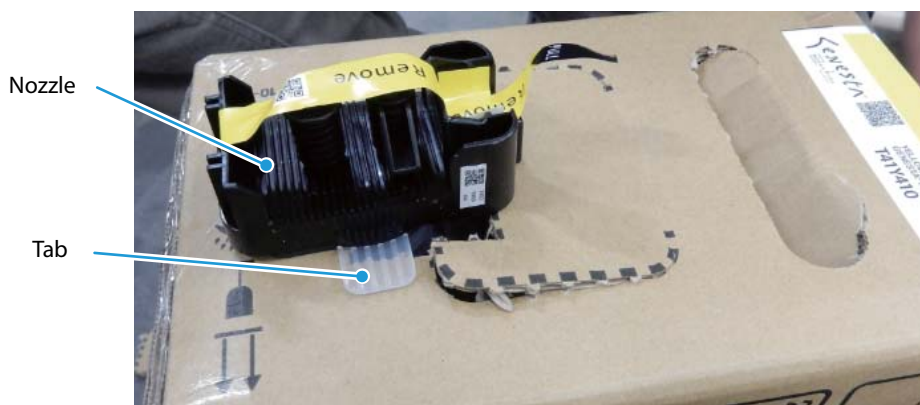


- 8** Remove the sticker from the ink cartridge.

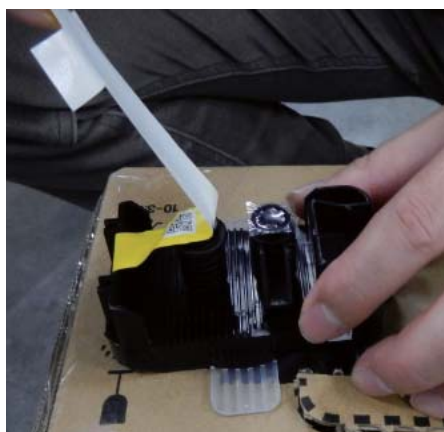

- 9 Pull the ink rack front bar towards you and down.
- 10 Remove the ink cartridge to be replaced from the ink rack. Grab the blue knobs on both sides of the BIB connection unit, and then pull it out toward you.

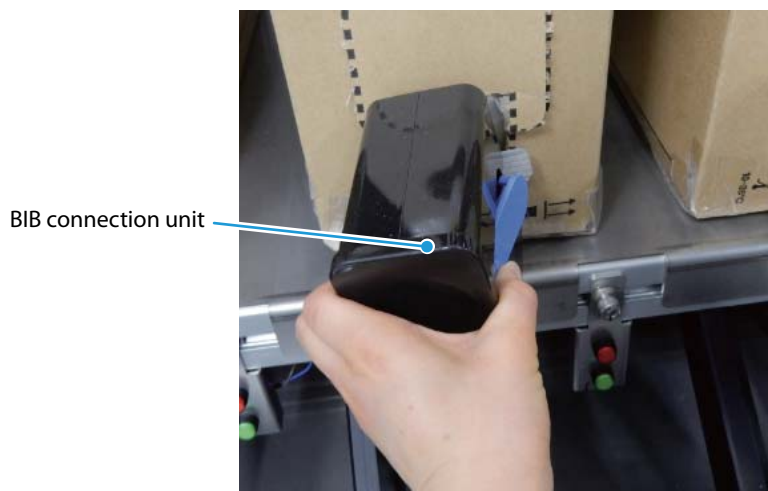

- 11 Lower the ink cartridge to be replaced from the ink rack.
- 12 Set the new ink cartridge in the ink rack.
- 13 Insert the BIB connection unit of the ink rack into the nozzle of the ink cartridge. Push the needle of the BIB connection unit into the nozzle of the ink cartridge. Insert it carefully and securely as shown in the following image.

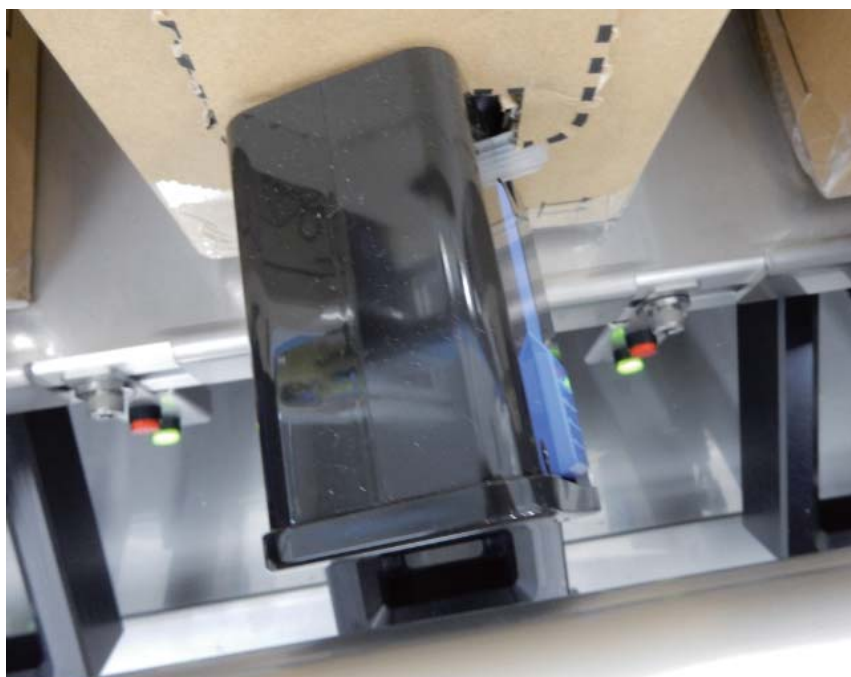

14 Raise the ink rack front bar up.

This completes ink replacement. When the sub-tank is filled with ink, the green LED on the ink rack illuminates.




Changing User Permissions

There are two types of user permissions: "L user permissions" and "H user permissions". The procedure for changing permissions is described below.

- 1 Click "Show Hidden Icons" in the Windows taskbar. Click "HookMe".



- 2 The [Login] screen is displayed. Enter the user's password, and click [OK].

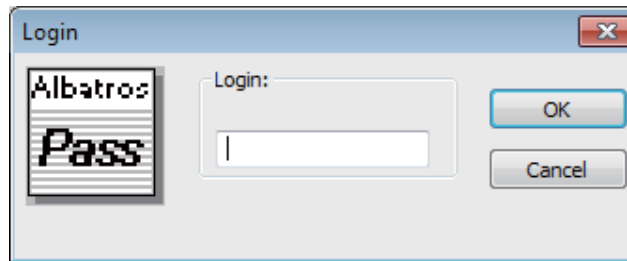


Inquire with qualified service personnel for the passwords for each user.

Check the Belt Cleaning Unit Operation


Colour exclusion mode is used for performing printing operations such print head operation and belt feeding without the use of ink.

You can check operation during Colour exclusion mode if you want to check operation of the belt cleaning unit without printing on fabric.

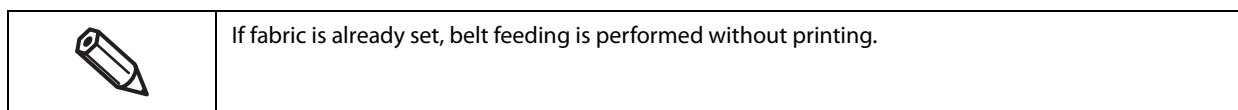

Follow these procedures to use this mode.

- 1 In the [Colours] menu, select [Colours exclusion].

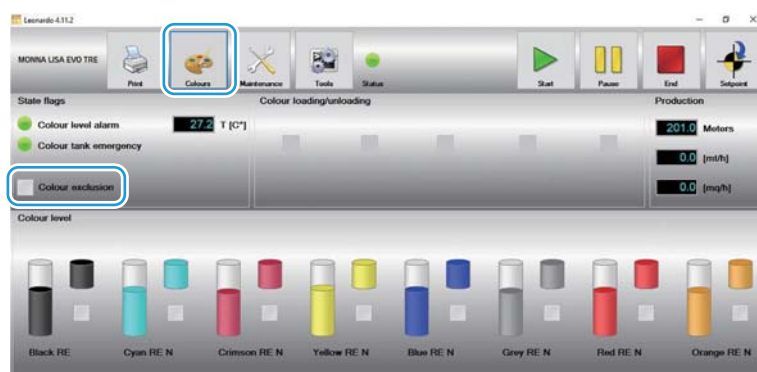

- 2 Click [Start].

Workflow When Turning Off the Power

This section describes the procedure for turning off the power.

1. Inserting the Stopper Pin of the Pressure Roller ([Page 96](#))
2. Cleaning ([Page 97](#))
3. Exiting Leonardo ([Page 97](#))
4. Turning Off the Control PC ([Page 97](#))
5. Emergency Stop by Use of an Emergency Stop Button ([Page 98](#))
6. Turn off the Main Power ([Page 98](#))
7. Closing the Water Supply Valve on the Belt Cleaning Unit ([Page 99](#))
8. Turning Off the Compressed Air Equipment ([Page 99](#))

Inserting the Stopper Pin of the Pressure Roller



CAUTION

Be sure to always insert the pins on the left and right when work is completed. Leaving the hanging low may deform the belt.

- 1 Open the rear protective cover.
- 2 Turn the selection switch (black) to the left and lift up the pressure roller.
- 3 Insert the right-side stopper pin into the pressure roller.



- 4 Insert the left-side pin into the pressure roller.



- 5 Close the rear protective covers.

Cleaning

Wipers and Caps

Refer to the "Maintenance Guide".

Flushing Plate

Refer to the "Maintenance Guide".

Belt (When Using Pigment Ink)

When pigment ink adheres to the belt, an ink film is formed. To prevent ink films, clean the belt referring to the Maintenance Guide.

Exiting Leonardo

Exit Leonardo.

Turning Off the Control PC

Shut down the control PC.

Emergency Stop by Use of an Emergency Stop Button

Push the emergency stop button to put the machine in emergency stop status, so that the print heads and motor do not operate suddenly when the power is turned on.

There are five emergency stop buttons around the machine. Firmly press one of these emergency stop buttons.

Turn off the Main Power


Turn off the power. Turn the [Main Power Switch] on the [Main Electric Box] to 0 (OFF).




Closing the Water Supply Valve on the Belt Cleaning Unit

Close the water supply valve at the bottom of the front of the machine.

Open

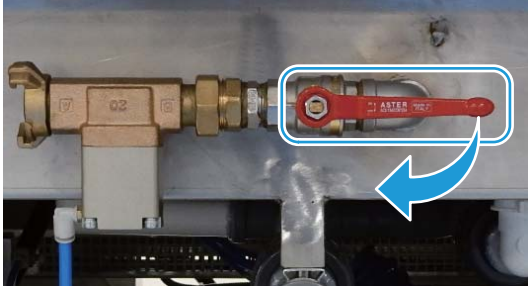

Closed

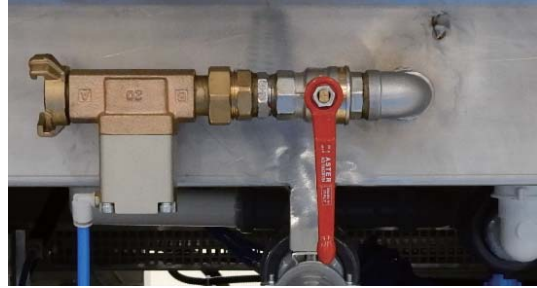

Turning Off the Compressed Air Equipment

Turn off the power for the compressed air equipment connected to this machine.

Troubleshooting

This section describes actions to take when trouble occurs.

Error Messages

This section describes the causes for error messages and the actions that should be taken.

If the trouble is not resolved even after taking these actions, contact the distributor where the machine was purchased for assistance.

Error Messages	Cause	Action
Bag not recognized Do you want to continue?	The ink cartridge is not recognized.	Disconnect the ink cartridge and then connect it again.
Colour doesn't match previous. Do you want to continue?	The color of the ink cartridge has changed.	Check if the ink cartridge is the wrong color.
Bag not inserted	The ink cartridge is not connected correctly.	Check if the BIB connection unit is connected to the nozzle on the ink cartridge correctly. Disconnect the ink cartridge and then connect it again.
Colour tank empty (Audible and light alarm)	Low ink was detected.	Replace the ink cartridge. If the ink cartridge is not replaced, printing will continue until the ink in the reserve tank in the ink system runs out, and then the machine will stop in "Pause" status. After the ink cartridge is replaced, press "Start" to restart printing.
Machine emergency (Light alarm)	An emergency stop button has been pressed. A fault has been detected.	Check the reason why the emergency stop button was pressed. Inspect the machine to see if a fault has occurred. Remove the cause of the fault. Turn off the power to the machine, turn off the system, reset all errors that have occurred, and then restart the system.
Guard emergency	A protective cover is open.	Close the protective cover.
No air	The air pressure is not sufficient. Air is not being supplied.	Check the air pressure. Check the air supply system.
Run machine set-point	Set point has not been executed. Set point has been reset due to a fault.	Execute Set point. If Set point was reset due to a fault, check the cause of the fault and reset it before executing Set point.

Error Messages	Cause	Action
Piece fault.	The fabric to be printed on is not affixed to the belt. There is an abnormality or fault on the surface of the fabric.	Check the fabric, and remove any folds or bulges. Remove the fabric and install it again.
Check piece fault excluded	The foreign material detection sensor is disabled.	Enable the foreign material detection sensor. It is dangerous to print with the foreign material detection sensor disabled. If an abnormality occurs in the fabric, or if the fabric is not affixed to the belt, the print heads could be damaged.
Printing suspended	Printing was paused by request.	Remove the cause for pausing the printer, and then click "Start" to restart printing.
Head height incorrect	The head height is incorrect.	Check the setting value.
Piece too tall	The fabric height is incorrect.	Check the setting value.
Initial design position too small	The print data setting is incorrect.	Increase the value for "Start printing".
Head not in safe position.	The print heads are not in the correct position.	Contact qualified service personnel for assistance.
CARRIAGE. carriage linear motor: Servoerror	The position of the print heads is not recognized due to a mechanical impediment.	Press an "Emergency stop button". Turn off the power to the machine. Remove the cause of the fault. Turn on the power to the machine.
CARRIAGE. carriage linear motor: encoder connection incorrect	The print heads were moved by hand.	
CARRIAGE. carriage linear motor: movement not completed	The print heads cannot move to the specified position due to a mechanical impediment.	
BELT. belt drive motor: Servoerror	The position of the belt is not recognized due to a mechanical impediment.	
BELT. belt drive motor: encoder connection incorrect	The belt was moved by hand.	
BELT. belt drive motor: movement not completed	The belt cannot move to the specified position due to a mechanical impediment.	
"xx-x" albre receiver disconnected	One or more devices have been disconnected from the internal system network.	Press an "Emergency stop button". Turn off the power to the machine. Check the connection of the network cable. Turn on the power to the machine.
"xx" albrem receiver disconnected		
"x" albstep receiver disconnected		

Error Messages	Cause	Action
"xx-x" albre receiver: +24cc power supply error	An error has occurred in a +24 V power supply device on the machine.	Press an "Emergency stop button". Turn off the power to the machine. Check the status of the device. Turn on the power to the machine.
"x" albstep receiver: +24cc power supply error		
File opening error	There is an error in the "ROBUST" file in the CAD system.	Delete the file. Create the file again in the CAD system.
File reading error		
Incongruent data in source file		
Quantity of data incorrect in file header		
Too many colour row values specified		
Design file version old		
Design file version not supported		
The height pixels exceed the print capacity		
Height resolution differs from that in the file		
Length resolution differs from that in the file		
Drop type in file incorrect		
Height increments don't match those in the file		
Length increments don't match those in the file		
Out of memory	A problem has occurred in the system memory.	Check if the OS settings on the system PC have been changed. Restart the machine.
There isn't enough memory to run the next band.		
File not found	The file to be printed was not found in the specified directory.	Specify the correct file name and directory.
Dongle error	The system does not recognize the dongle.	Contact qualified service personnel for assistance.
Invalid dongle		
Colours different from those in the machine	The printed color does not match either the file to be printed or the specified color.	If there is no problem with the color to be printed, continue printing. Check the file to be printed.
Colours in design file swapped		

Error Messages	Cause	Action
Print start error	An error or fault has occurred in the control system during system initialization or printing.	Restart the machine.
First pixel error		
Pixel count error		
TIMEMAC error		
REQ error		
Interruption due to TIMEMAC error		
Generic error	An unidentified error has occurred.	Restart the machine.
"Foreign material sensor" detected some foreign materials or a fabric error	The foreign material detection sensor detected foreign material on the belt or wrinkles or folds in the fabric.	Check if there is any foreign material on the belt and if the fabric is wrinkled or folded.
"Head stroke sensor" detected some foreign materials or a fabric error	The head stroke sensor detected foreign material on the belt or wrinkles or folds in the fabric.	Check if there is any foreign material on the belt and if the fabric is wrinkled or folded.
HEAD4 "\$x" DRV "\$x" temperature > "\$x"°	The temperature of the print head drive substrate cannot be lowered.	Clean or replace the cooling fan filters. For more information about cleaning and replacement, refer to the Maintenance Guide.

Error Lamp of the Dry Air System

Repair is necessary if the error lamp lights up. Please contact Epson.


Print Quality

Condition	Cause	Action
Poor print quality	Faulty discharge of print head	Increase the number of printing passes. (See " Load the Print Data " on page 80) Perform a nozzle check when changing jobs. Check that discharge is normal (normal print quality) before printing.
Mixed ink colors	Ink mixing is occurring in the print head.	Perform manual flushing for the print head. (Refer to " Manual flushing " on page 104)

Manual flushing

Perform manual flushing on the print head to resolve ink color mixing.


1 Click [Maintenance].

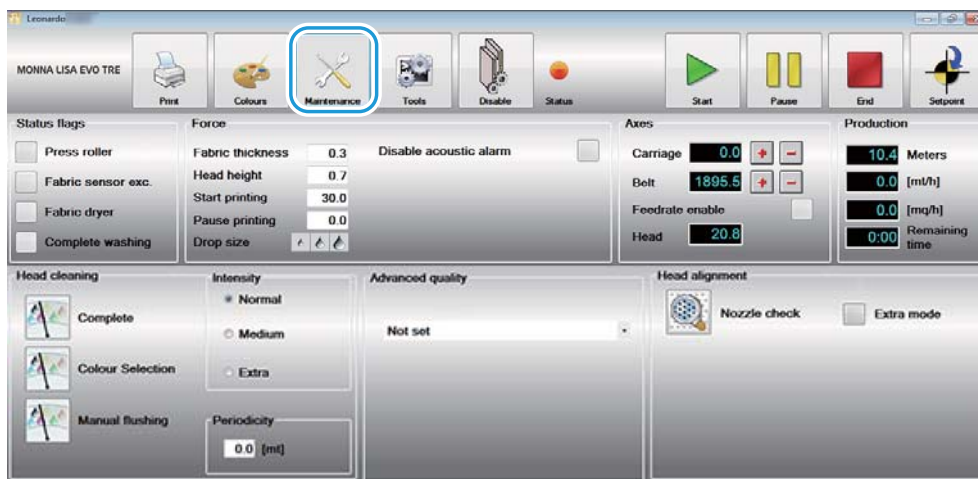


2 Click [Manual flushing].



3 On the [Color Selection] screen, select the print head for manual flushing. Multiple print heads can be selected.

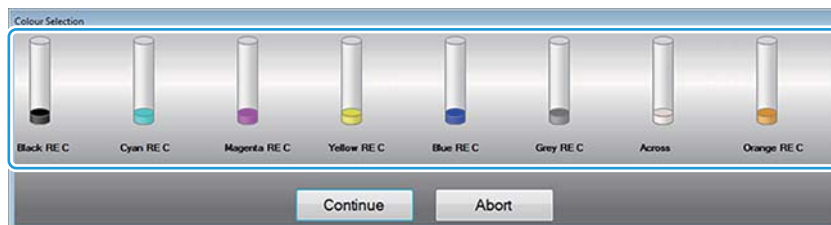

The selected print head changes its display as shown below.

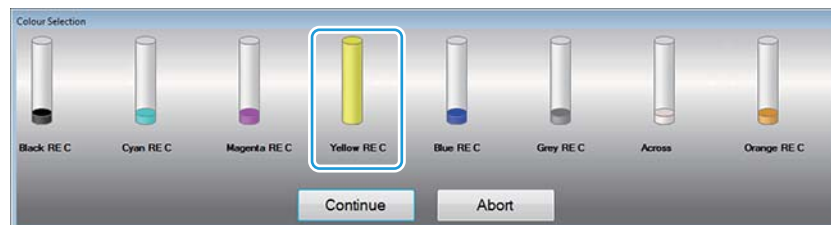

4 Click [Continue].

The print head moves over the flushing plate and starts manual flushing. When manual flushing is completed, the print head returns to its original position.

5 Perform a nozzle check to see if there is any ink color mixing.


For more information, refer to ["Nozzle Check" on page 51](#).

If the nozzle check pattern has mixed colors, perform manual flushing again.

Print Head Failure


If a print head failure occurs, promptly make a request for repairs to be performed.

If a print head failure occurs on this machine, you can configure the settings so that only that specific head column is not printed. The other print heads will cover for the head that does not print. This will cause the print speed to drop, but production can continue until the head is repaired.


	<p>For more information about how to use this function, contact qualified service personnel.</p>
---	--

1 Use nozzle check and other functions to identify the print head that has failed.

2 Click "Disable" in Leonardo.

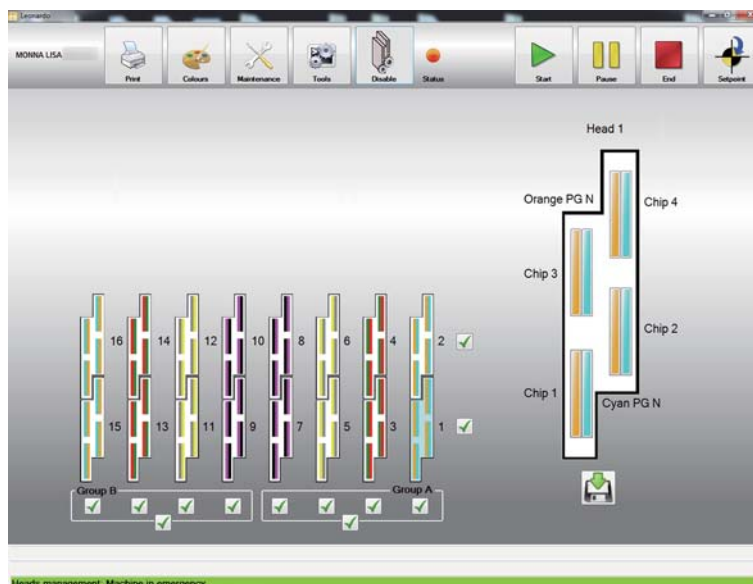

3 Select the check box for the column or row of the print head that has failed, and an "X" will appear at that position.

	<p>We do not recommend unselecting the check boxes for [Group A/Group B] along the bottom of this screen; doing so might adversely affect image quality.</p>
---	--

Specifications

This section describes the specifications for the EVO TRE 16-180.

Basic Specifications

Item	Specifications	Notes
Printhead	Inkjet	8-color
Compatible inks	Reactive ink, dispersion ink, acid ink, Pigment, penetration liquid (acid and reactive use)	
Printing resolution	X: Scanning direction Min. 300 dpi to Max. 1,200 dpi Y: Fabric feed direction 600 dpi, 1,200 dpi	
Print speed	See " Resolution/Number of Passes and Print Speed " on page 108.	
Max. printing width	1,800 mm {70,866 in}	
Color number	8-color	
Ink pack	1 color/1 pack	
Ink pack capacity	10 liters {610 in ³ }	
Printer operating environment	Temperature: 20 to 30 °C {68 to 86°F} Humidity: 35 to 80 % RH (no condensation)	
Recommended printing environment	Temperature: 22 to 28 °C {71.6 to 82.4 °F} Humidity: 35 to 80 % RH (no condensation)	
Printer storage environment	Store the printer filled with ink. Do not turn off the power for dry air when storing the printer. Temperature: 0 to 40 °C {32 to 104 °F} 1 month Must not be any condensation.	
Device dimensions	Printer: 4,660 (W) x 2,390 (D) x 1,940 (H) mm {183 x 94 x 76 in} Main electric box: 620 (W) x 1,220 (D) x 2,070 (H) mm {24 x 48x 81 in} Ink rack: 1,240 (W) x 1,300 (D) x 1,220 (H) mm {49 x 51 x 48 in}	Not including the feeding, winding, and drying areas. Height includes the adjusters and tower lamp.
Equipment weight	Printer: Approx. 3,500 kg {7,716 lb} Main electric box: Approx. 330 kg {728 lb} Ink rack: Approx. 380 kg {838 lb}	

Resolution/Number of Passes and Print Speed

* Prerequisites: Bidirectional printing, 1,500 mm printing width

Print speed differs depending on the images, firmware, PC operating status and print settings.

Resolution		Number of passes	Print speed * (m ² /h)
Scan direction [dpi]	Belt direction [dpi]		
300	600	1 pass	404
	600	2 passes	236
	600	3 passes	159
	1,200	2 passes	215
	1,200	4 passes	120
	1,200	6 passes	80
600	600	1 pass	270
	600	2 passes	221
	600	3 passes	160
	600	4 passes	103
	1,200	2 passes	135
	1,200	4 passes	111
	1,200	6 passes	81
	1,200	8 passes	52
900	600	1 pass	182
	600	2 passes	171
	600	3 passes	147
	600	4 passes	79
	1,200	2 passes	90
	1,200	4 passes	87
	1,200	6 passes	74
	1,200	8 passes	40

Resolution		Number of passes	Print speed * (m ² /h)
Scan direction [dpi]	Belt direction [dpi]		
1,200	600	1 pass	142
	600	2 passes	135
	600	3 passes	126
	600	4 passes	63
	1,200	2 passes	71
	1,200	4 passes	69
	1,200	6 passes	63
	1,200	8 passes	32

Printing Width

Item		Specifications
Possible printing area	Scan direction (x)	300 to 1,800 mm {11.8 to 70.9 in}
Margin specifications		No margin
Printing width settings input units		0.1 mm {0.0039 in}

Elevation

1,000 m {3,281 ft} or less

Power

Item	Specifications	Notes
Voltage	400 V \pm 10 %, 3-phase + Neutral + Earth	
Frequency	50 / 60 Hz \pm 3 %	
Power consumption	20 KVA	
Leakage current	300 mA or less	
Factory facilities Connected/Wired	Type: Terminal block connection Connecting part model: CBD 16 (Manufacturer. by Cabur) Compatible crimped terminals (reference): Ferrule type WP160/22 Wiring specifications (recommended): 600 V pressure resistance (UL1063 equivalent) Wire size of AWG12 or larger	

Factory facilities

Item	Specifications	Notes
Electrical power	See "Power" on page 110.	
Pressurized air	Connect with a $\Phi 8$ -mm (ext. diam.) hose Pressure: Min. 0.6 MPa (6 bar) Flow rate: 1,600 Liter/hr	Required for raising/lowering the cleaning tank, ink pressure, etc.
Water	Connector: 3/4 gas Pressure: Max. 0.5 MPa (5 bar) Flow rate: Max. 100 Liter/hr {6,102 in ³ /h}	Required for belt cleaning.
Wastewater	Connect with a $\Phi 40$ -mm (ext. diam.) pipe	Required for wastewater for belt cleaning. Users are requested to dispose of wastewater according to local laws and regulations.
Waste liquid	Flushing area Outer diameter of ink discharge outlet: $\Phi 20$ mm Applicable inner tube diameter: $\Phi 19$ mm	Waste ink is discharged from the flushing area and cleaning station, and therefore it is necessary to provide a route for waste liquid in the factory's drainage system. Users are requested to dispose of waste ink according to local laws and regulations.
	Cleaning station Outer diameter of ink discharge outlet: $\Phi 40$ mm Applicable inner tube diameter: $\Phi 38$ to 39 mm	
Exhaust	Connector: $\Phi 125$ mm Flow rate: 1,200 m ³ /hr {73,228,493 in ³ /h}	Required for mist exhaust in the machine. If a 1,200 m ³ /h exhaust system is not available, please provide a mist exhaust fan.
Network	A communication speed of 100BASE-TX or more is recommended	Please provide a network environment to which a PC can be connected.

Supported Ink

The supported inks are subject to change without notice. Check with the distributor where the machine was purchased for the latest information.

Ink Type	Color Name	Color Code	Product No.
Acid	Black	BK	C13T41X110 C13T41X11A
	Cyan	C	C13T41X210
	Magenta	M	C13T41X310
	Yellow	Y	C13T41X410
	Grey	GY	C13T41X510 C13T41X51A
	Red	R	C13T41X610 C13T41X61A
	Blue	BL	C13T41X710
	Cobalt	CO	C13T41X810 C13T41X81A
	Orange	OR	C13T41X910
	Orange - F	OR-F	C13T41XA10 C13T41XA1A
	Rubine	RB	C13T41XB10 C13T41XB1A
	Navy Blue	NB	C13T41XC10
	Brown	BR	C13T41XD10
	Fluorescent Pink	FP	C13T41XE10
Fluorescent Flavine	FL	C13T41XF10	

Ink Type	Color Name	Color Code	Product No.
Reactive (RE-N)	Black	BK	C13T41Y110 C13T41Y11A
	Cyan	C	C13T41Y210 C13T41Y21A
	Magenta	M	C13T41Y310 C13T41Y31A
	Yellow	Y	C13T41Y410 C13T41Y41A
	Grey	GY	C13T41Y510 C13T41Y51A
	Red	R	C13T41Y610 C13T41Y61A
	Blue	BL	C13T41Y710 C13T41Y71A
	Orange	OR	C13T41Y810 C13T41Y81A
	Navy Blue	NB	C13T41Y910
	Brown	BR	C13T41YA10
	Crimson	CR	C13T41YB10 C13T41YB1A
	Grey (GOTS)* ¹	GY-G	C13T41YC10 C13T41YC1A
Reactive (RE-C)	Black	BK	C13T52G110
	Cyan	C	C13T52G210
	Magenta	M	C13T52G310
	Yellow	Y	C13T52G410
	Grey	GY	C13T52G510
	Red	R	C13T52G610
	Blue	BL	C13T52G710
	Orange	OR	C13T52G810
	Crimson	CR	C13T52GB10
Reactive (RE-E)	Black	BK	C13T52U110
	Cyan	C	C13T52U210
	Magenta	M	C13T52U310
	Yellow	Y	C13T52U410
	Grey	GY	C13T52U510
	Red	R	C13T52U610
	Blue	BL	C13T52U710
	Orange	OR	C13T52U810

Ink Type	Color Name	Color Code	Product No.
Disperse	Black	BK	C13T42A110
	Cyan	C	C13T42A210
	Magenta	M	C13T42A310
	Yellow	Y	C13T42A410
	Grey	GY	C13T42A510
	Red	R	C13T42A610
	Blue	BL	C13T42A710
	Orange	OR	C13T42A810
Pigment	Black	BK	C13T42B110 C13T42B11A
	Cyan	C	C13T42B210 C13T42B21A
	Magenta	M	C13T42B310 C13T42B31A
	Yellow	Y	C13T42B410 C13T42B41A
	Yellow - C	Y	C13T42B41B
	Grey	GY	C13T42B510 C13T42B51A
	Red	R	C13T42B610 C13T42B61A
	Green	GR	C13T42B710 C13T42B71A
	Orange	OR	C13T42B810 C13T42B81A
Others	Ink Penetration Liquid (Acid ink, reactive ink)*2	AC	C13T41XG10
	Ink Penetration Liquid (Disperse ink)*2	AC	C13T42A910

*1 GOTS: Global Organic Textile Standard

*2 Do not use the color (column) next to Across in the same head. The discharge of Across may become unstable.
For details, refer to "Colour" in the Leonardo Reference Guide, or inquire with qualified service personnel.

Consumables

Product Name	Model	Use
Clean StickB	C13S090011	Cap and wiper cleaning
Head Cleaning Cloth A	C13S210050	Head cleaning
Maintenance Liquid	C13T42X000	Wetted parts cleaning
Cleaning Liquid	C13T41X010	For cleaning before initial charging Use it after the ink replacement