

リストバンド専用アタッチメント取扱説明書 (OT-WA34)


本製品 (OT-WA34) は、プリンター (CW-C4000/TM-C3500/TM-C3400) でリストバンドに印刷を行うときにプリンターに取り付けて使用します。ご使用の際には、必ず本書をよくお読みの上、正しくお使いください。

使用上の注意


- 本製品は、CW-C4000/TM-C3500/TM-C3400 (ファームウェア: Ver. WSN00170 以降、プリンタードライバー: Ver.1.2.0.0 以降) 専用オプションとしてご使用いただけます。他のプリンター製品ではご使用になれません。
- 本製品は、リストバンド (WB-L1/M1/S1) をご使用になる際に必要となる製品です。その他の用紙、ラベル紙をご使用になる場合には必要ありません。
- 本製品をプリンターに取り付ける際、または取り外す際には、ケガをしないようにご注意ください。
- リストバンドをプリンターにセットする際は、プリンターのマニュアルをお読みください。
- リストバンドに同梱されている取扱説明書をお読みになり、正しく安全にお使いください。

取り付ける場合


- 1** リリースレバーを手前に引き、ロール紙カバーを開けます。
ロール紙またはロール芯があれば、取り出します。

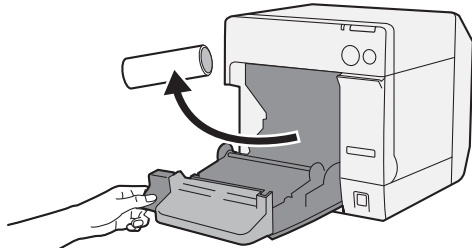


- 2** ロール紙カバー内側の溝に紙送りガイド (ファンフォールド紙用) が付いている場合は、取り外します。

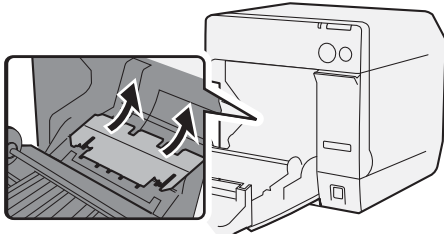

- 3** リストバンド専用アタッチメントを、ロール紙カバーの内側の溝に差し込んで取り付けます。

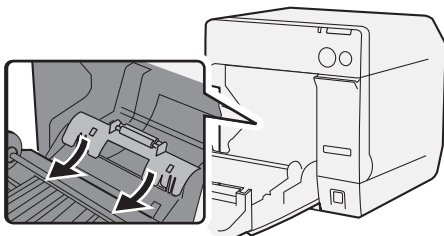


- 4** ロール紙カバーを閉めます。

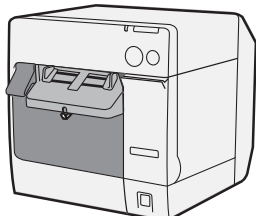


取り外す場合


- 1** リリースレバーを手前に引き、ロール紙カバーを開けます。

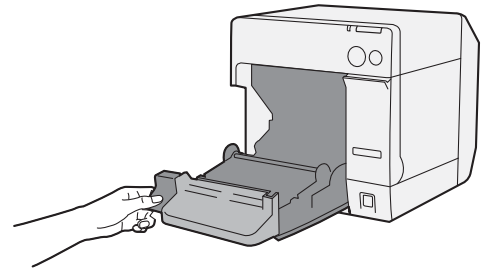

- 2** リストバンド専用アタッチメントを取り外します。

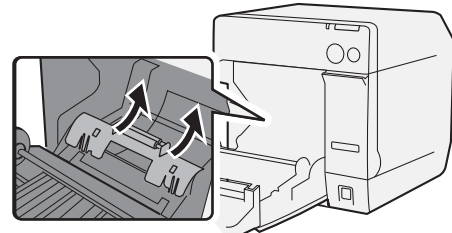

- 3** ロール紙カバーを閉めます。

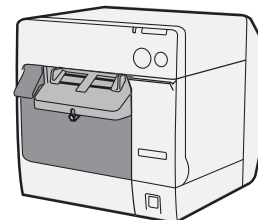

Attachment for Wristband User's Manual (OT-WA34)


This product (OT-WA34) is used by attaching it to a printer when printing to a wristband with a printer (CW-C4000/TM-C3500/TM-C3400). Read these instructions carefully to use this product correctly.

Precautions for Use


- This product can be used as a dedicated option for CW-C4000/TM-C3500/TM-C3400 (firmware: Ver. WSN00170 or later, printer driver: Ver.1.2.0.0 or later). Cannot be used with other printer products.
- This product is necessary for using the wristband (WB-L1/M1/S1), and is unnecessary for any other type of paper or label.
- Be careful not to hurt yourself when installing this product into the printer or removing it.
- When loading the wristband into the printer, refer to the printer's manual.
- Read the instruction manual included with the wristband to use it safely and correctly.

Installing the Attachment


- 1** Pull the release lever to open the roll paper cover. Remove the roll paper or used roll paper core if there is one.

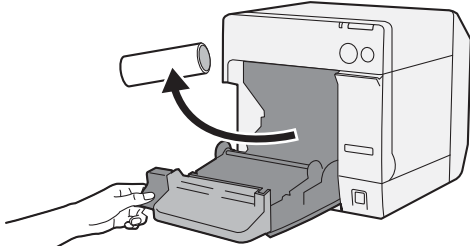


- 2** If the paper feed guide for fanfold paper is attached into the grooves inside of the roll paper cover, remove it.

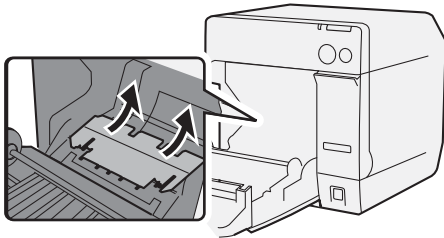

- 3** Install the attachment for wristband by inserting it into the grooves inside of the roll paper cover.

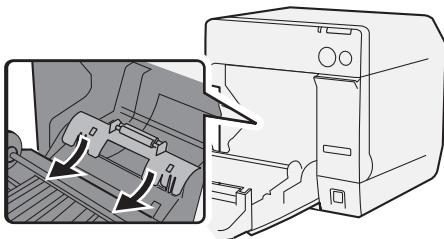


- 4** Close the roll paper cover.

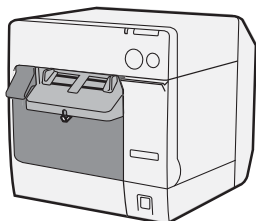


Removing the Attachment

- 1** Pull the release lever to open the roll paper cover.

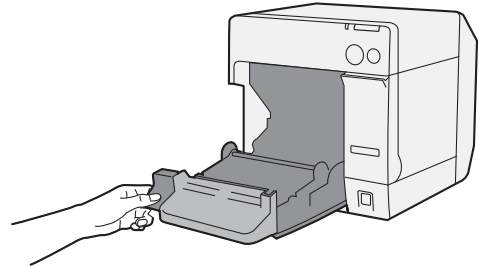

- 2** Remove the attachment for wristband.

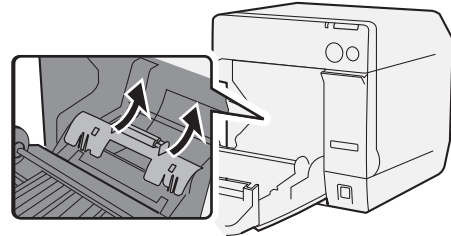

- 3** Close the roll paper cover.

