



\*401171200\*

## ***TM-U675/U675P Paper Guide Installation***

When you want to use a paper roll that is 76 mm wide, you need to attach the paper holder and paper roll guide packed with the printer. Follow the steps below.


### ***Note:***

*You do not need this with standard 82-83 mm paper rolls.*


1. Before attaching the paper guide, change DIP switch 2-4 to ON.
2. Open the paper roll cover and remove the paper roll take-up device.
3. Insert the paper holder at an angle as shown.

### **CAUTION:**


*Be sure that you do not catch the lead wire of the paper end sensor with the holder when you insert it.*

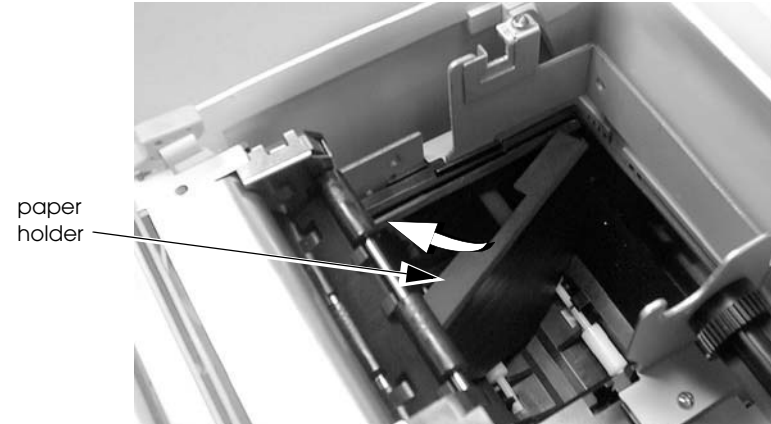

4. Slide the holder in the direction indicated by the arrow in the illustration above until you feel it click. It should now be in the position shown in the illustration below.

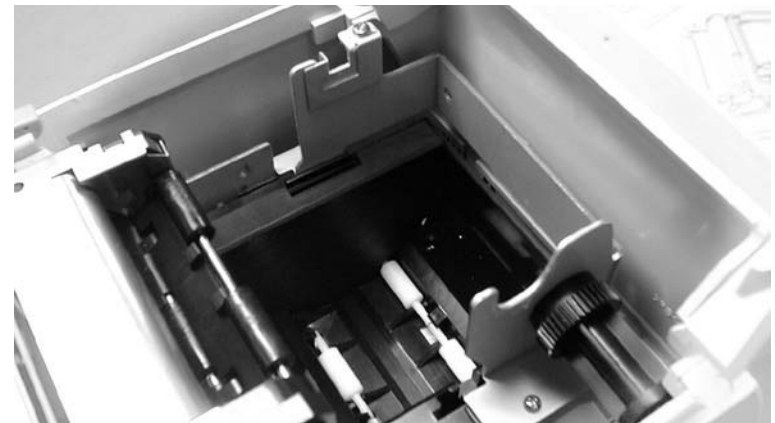

5. Attach the paper roll guide as shown below. Be sure that the rectangular hole in the guide fits over the tab on the printer. Push the guide until you feel it click into place.

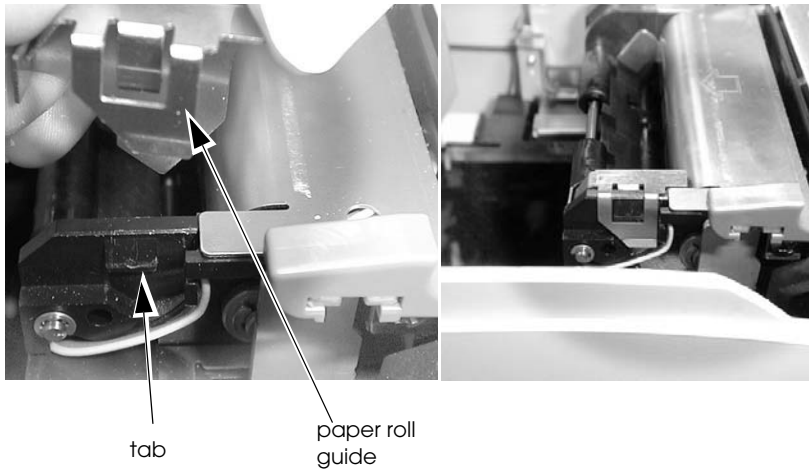

6. Install a paper roll; then close the cover.